


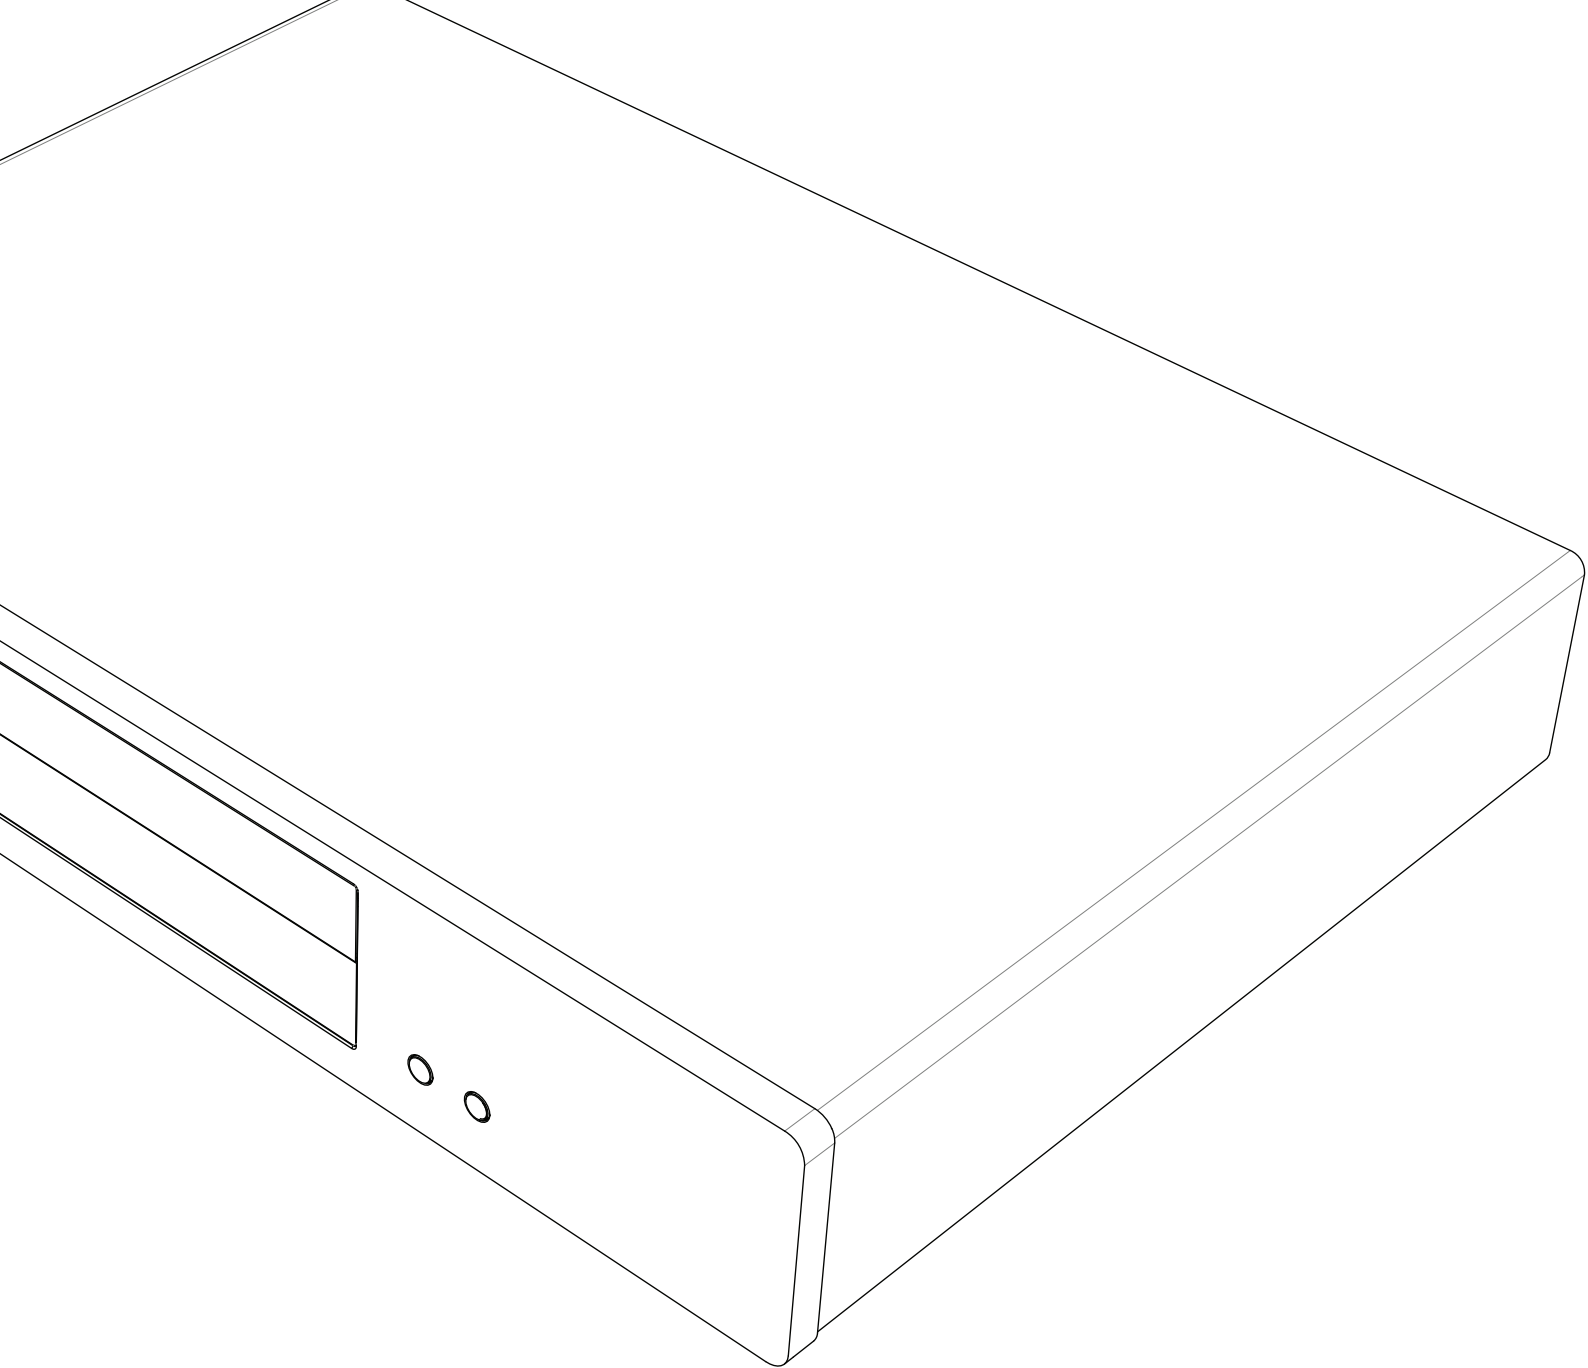

**CXUHD**  
UNIVERSAL DISC PLAYER



## Contents

|                                                                  |           |
|------------------------------------------------------------------|-----------|
| Important safety instructions .....                              | 3         |
| Limited warranty .....                                           | 5         |
| Compatible disc types .....                                      | 6         |
| Discs that cannot be played .....                                | 6         |
| Rear panel connections .....                                     | 7         |
| Front panel controls .....                                       | 8         |
| Remote control .....                                             | 9         |
| Connecting to a wired network .....                              | 10        |
| Connecting to a wireless network .....                           | 10        |
| Audio output connections .....                                   | 11        |
| HDMI connections .....                                           | 12        |
| Setting up the player .....                                      | 12        |
| Operating instructions .....                                     | 12        |
| Getting started .....                                            | 12        |
| <b>Options menu .....</b>                                        | <b>13</b> |
| Within music file playback .....                                 | 13        |
| Within video discs (DVD, BD) and video file playback .....       | 13        |
| Within photo file playback .....                                 | 13        |
| Skip playback .....                                              | 13        |
| Go to .....                                                      | 13        |
| Slow .....                                                       | 13        |
| Pause and frame by frame .....                                   | 13        |
| Repeat .....                                                     | 13        |
| A-B repeat .....                                                 | 13        |
| On-screen display .....                                          | 14        |
| Audio language (soundtrack) selection .....                      | 14        |
| Subtitle selection .....                                         | 14        |
| Angle selection .....                                            | 14        |
| Zoom .....                                                       | 14        |
| Blu-ray disc menu .....                                          | 14        |
| Dvd disc menu .....                                              | 14        |
| Memory and automatic resume .....                                | 14        |
| HDMI input selection .....                                       | 14        |
| Audio return channel (ARC) selection .....                       | 14        |
| Playback by chapter or track number .....                        | 14        |
| Playback from a specific location on DVD and Blu-ray discs ..... | 15        |
| Picture-in-picture and secondary audio .....                     | 15        |
| Pure audio mode .....                                            | 16        |
| Shuffle and random modes .....                                   | 16        |
| <b>Media playback from USB devices .....</b>                     | <b>16</b> |
| <b>Network media playback .....</b>                              | <b>16</b> |
| <b>Using the home menu .....</b>                                 | <b>16</b> |
| <b>Setup menu .....</b>                                          | <b>18</b> |
| <b>Playback setup .....</b>                                      | <b>19</b> |
| <b>Video output setup .....</b>                                  | <b>20</b> |
| <b>Audio output setup .....</b>                                  | <b>22</b> |
| <b>Device setup .....</b>                                        | <b>23</b> |
| <b>Network setup .....</b>                                       | <b>24</b> |
| <b>Technical specifications .....</b>                            | <b>27</b> |
| <b>Troubleshooting .....</b>                                     | <b>27</b> |

Make sure you register your purchase.

Visit: [www.cambridgeaudio.com/vip](http://www.cambridgeaudio.com/vip)

By registering, you'll be the first to know about:

- Future product releases
- Software upgrades
- News, events and exclusive offers plus competitions!

© Copyright Cambridge Audio Ltd 2017.

"HDMI", "HDMI logo" and "High-Definition Multimedia Interface" are trademarks or registered trademarks of HDMI Licensing LLC.

"Blu-ray Disc", "Blu-ray", "Blu-ray 3D", "BD-Live", "BONUSVIEW", and the logos are trademarks of Blu-ray Disc Association.

Java is a trademark of Oracle and/or its affiliates.

DVD Logo is a trademark of DVD Format/Logo Licensing Corp., registered in the U.S., Japan and other countries.

Super Audio CD, SACD and the SACD logo are joint trademarks of Sony Corporation and Philips Electronics N.V. Direct Stream Digital (DSD) is a trademark of Sony Corporation.

"AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.

Designed for Windows Media, Microsoft, HDCD, and the HDCD logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. "Cinavia" is trademark of Verance Corporation.

All other trademarks are the properties of their respective owners.

## Important safety instructions

For your own safety please read the following important safety instructions carefully before attempting to connect this unit to the mains power supply. They will also enable you to get the best performance from and prolong the life of the unit:

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug having been damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### WARNING:

**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE AND OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHOULD NOT BE PLACED ON THIS APPARATUS.**

**Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.**

TO COMPLETELY DISCONNECT THIS APPARATUS FROM THE AC MAINS, DISCONNECT THE POWER SUPPLY CORD PLUG FROM THE AC RECEPTACLE. POUR DECONNECTER COMPLETEMENT L'APPAREIL DU RESEAU D'ALIMENTATION, DECONNECTER LE CORDON D'ALIMENTATION DE LA PRISE MURALE.

THE MAINS PLUG OF THE POWER SUPPLY CORD SHALL REMAIN READILY ACCESSIBLE. LA PRISE DU RESEAU D'ALIMENTATION DOIT DEMEURER AISEMENT ACCESSIBLE.

Only use the mains cord supplied with this unit.

**Class 1 Laser Product**  
**Luokan 1 Laserplaitte**  
**Klass 1 Laserapparat**

This product utilises a Laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. Do not open covers and do not repair yourself. Refer servicing to qualified personnel.



This label is located on the laser protective housing inside the product.

Use of the apparatus in tropical climates (The equipment shall be used at maximum 45 degree C ambient temperature).



The lightning flash with the arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-insulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the service literature relevant to this appliance.

The unit is of Class 1 construction and must be connected to a mains socket outlet with a protective earthing connection.



### WEEE symbol

The crossed-out wheeled bin is the European Union symbol for indicating separate collection for electrical and electronic equipment. This product contains electrical and electronic equipment which should be reused, recycled or recovered and should not be disposed of with unsorted regular waste. Please return the unit or contact the authorised dealer from whom you purchased this product for more information.



### CE Mark

This product complies with European Low Voltage (2014/35/EU), Electromagnetic Compatibility (2014/30/EU) and Environmentally-friendly design of Energy-related Products (2009/125/EC) Directives when used and installed according to this instruction manual. For continued compliance only Cambridge Audio accessories should be used with this product and servicing must be referred to qualified service personnel.



### RCM (regulatory compliance mark)

This product meets Australia, New Zealand Safety, EMC and Radio Communications requirements of the ERAC and ACMA.



### CU-TR mark

This product meets Russia, Byelorussia and Kazakhstan electronic safety approvals.

### Ventilation

**Important** – The unit will become hot when in use. Do not stack multiple units on top of each other. Do not place in an enclosed area such as a bookcase or in a cabinet without sufficient ventilation.

Ensure that small objects do not fall through any ventilation grille. If this happens, switch off immediately, disconnect from the mains supply and contact your dealer for advice.

Please ensure there is ample ventilation (at least 20cm clearance on the top, side and rear). Do not put any objects on top of this unit. Do not situate it on a rug or other soft surface and do not obstruct any air inlets or outlet grilles. Do not cover the ventilation grilles with items such as newspapers, tablecloths, curtains, etc.

### Positioning

Choose the installation location carefully. Avoid placing it in direct sunlight or close to a source of heat. No naked flame sources, such as lighted candles, should be placed on the unit. Also avoid locations subject to vibration and excessive dust, cold or moisture. The unit can be used in a moderate climate.

This unit must be installed on a sturdy, level surface. Do not place in a sealed area such as a bookcase or in a cabinet. Do not place the unit on an unstable surface or shelf. The unit may fall, causing serious injury to a child or adult as well as serious damage to the product. Do not place other equipment on top of the unit.

Due to stray magnetic fields, turntables or CRT TVs should not be located nearby due to possible interference.

Electronic audio components have a running in period of around a week (if used several hours per day). This will allow the new components to settle down and the sonic properties will improve over this time.

### Power sources

The unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power-supply to your home, consult your product dealer or local power company.

This unit can be left in Standby mode when not in use and will draw <0.5W in this state. To turn the unit off, unplug it from the mains socket.

## Overloading

Do not overload wall outlets or extension cords as this can result in a risk of fire or electric shock. Overloaded AC outlets, extension cords, frayed power cords, damaged or cracked wire insulation and broken plugs are dangerous. They may result in a shock or fire hazard.

Be sure to insert each power cord securely. To prevent hum and noise, do not bundle the interconnect leads with the power cord or speaker leads.

## Cleaning

To clean the unit, wipe its case with a dry, lint-free cloth. Do not use any cleaning fluids containing alcohol, ammonia or abrasives. Do not spray an aerosol at or near the unit.

## Battery disposal

Please dispose of any discharged batteries according to local environmental/electronic waste disposal guidelines.

## Connections

Before making any connections, make sure all power is turned off and only use suitable interconnects.

## Servicing

These units are not user serviceable. Never attempt to repair, disassemble or reconstruct the unit if there seems to be a problem. A serious electric shock could result if this precautionary measure is ignored. In the event of a problem or failure, please contact your dealer.

# Wi-Fi information

## FCC statement

### DECLARATION OF CONFORMITY WITH FCC RULES FOR ELECTROMAGNETIC COMPATIBILITY

We, Cambridge Audio, of Gallery Court, Hankey Place, London SE1 4BB,  
declare under our sole responsibility that this device,

CXUHD with Wi-Fi module

to which this declaration relates, complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Federal communications commission notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## IMPORTANT Note:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

2.4GHz operation of this product in the USA is firmware-limited to channels 1 through 11, 5G channels are 36-48, 52-64, 100-140, 149-161.

## Modifications

The FCC requires the user to be notified that any changes or modifications to this device that are not expressly approved by Cambridge Audio, may void the user's authority to operate the equipment.

## Canada-Industry Canada (IC)

Contains IC:20960-WUS14

This radio transmitter model number WUS-AC14 has been approved by Industry Canada.

This Class B digital apparatus complies with Canadian standard ICES-003. This device complies with Industry Canada License exempt RSS standard(s). Operation is subject to the following two conditions.

(1) this device may not cause interference and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## IMPORTANT NOTE:

### IC radiation exposure statement

This equipment complies with RSS-102 limits set fourth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

The transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Industrie Canada (IC)

Contient IC:20960-WUS14

Cet émetteur radiophonique numéro de modèle WUS-AC14 a été approuvé par Industrie Canada.

Cet appareil numérique de Classe B est conforme à la norme canadienne ICES-003. Cet appareil est conforme aux normes RSS exemptes de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes :

(1) cet appareil ne doit pas provoquer d'interférence nuisible et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant provoquer un fonctionnement indésirable.

## NOTE IMPORTANTE:

IC Déclaration sur la radioexposition

Cet équipement est conforme aux limites RSS-102 préconisées pour un environnement non contrôlé. Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

L'émetteur ne doit pas être co-placé ni fonctionner en conjonction avec une autre antenne ou transmetteur.

## Europe-European Union Notice

Radio products with the CE alert marking comply with the RED Directive (2014/53/EU) issued by the Commission of the European Community.

### 2.4G

Radio Frequency: 2412-2472MHz, the Max. EIRP power 18dBm.

### 5G

Radio Frequency: 5180-5825MHz, the Max. EIRP power 17dBm.

This product can be used across EU member states, compliance with this directive implies conformity to the following European Norms.

- EN 60065 – Product Safety.
- EN 300 328, EN 301 893, EN 62311, EN 300 440 – Technical requirement for radio equipment.
- EN 301 489 – General EMC requirements for radio equipment.

## Limited warranty

Cambridge Audio warrants this product to be free from defects in materials and workmanship (subject to the terms set forth below). Cambridge Audio will repair or replace (at Cambridge Audio's option) this product or any defective parts in this product. Warranty periods may vary from country to country. If in doubt consult your dealer and ensure that you retain proof of purchase.

To obtain warranty service, please contact the Cambridge Audio authorised dealer from which you purchased this product. If your dealer is not equipped to perform the repair of your Cambridge Audio product, it can be returned by your dealer to Cambridge Audio or an authorised Cambridge Audio service agent. You will need to ship this product in either its original packaging or packaging affording an equal degree of protection.

Proof of purchase in the form of a bill of sale or receipted invoice, which is evidence that this product is within the warranty period, must be presented to obtain warranty service.

This warranty is invalid if (a) the factory-applied serial number has been altered or removed from this product or (b) this product was not purchased from a Cambridge Audio authorised dealer. You may call Cambridge Audio or your local country Cambridge Audio distributor to confirm that you have an unaltered serial number and/or you made a purchase from a Cambridge Audio authorised dealer.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of, the product. This warranty does not cover damage due to improper operation, maintenance or installation, or attempted repair by anyone other than Cambridge Audio or a Cambridge Audio dealer, or authorised service agent which is authorised to do Cambridge Audio warranty work. Any unauthorised repairs will void this warranty. This warranty does not cover products sold AS IS or WITH ALL FAULTS.

REPAIRS OR REPLACEMENTS AS PROVIDED UNDER THIS WARRANTY ARE THE EXCLUSIVE REMEDY OF THE CONSUMER. CAMBRIDGE AUDIO SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY IN THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS AND IMPLIED WARRANTIES WHATSOEVER INCLUDING, BUT NOT LIMITED TO, THE WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PRACTICAL PURPOSE.

Some countries and US states do not allow the exclusion or limitation of incidental or consequential damages or implied warranties so the above exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other statutory rights, which vary from state to state or country to country.

For any service, in or out of warranty, please contact your dealer.

## Compatible disc types



### BD-Video

Supports 4K Ultra HD Blu-ray and Blu-ray with Bonus View and BD-Live content, including Blu-ray 3D discs. A 3D-capable display with compatible glasses is required for 3D playback. BD-R/RE, both single- and dual-layer are also supported.



### DVD-Video

DVD movie discs in DVD+RW/DVD+R/DVD-RW/DVD-R formats.



### DVD-Audio

DVD format discs containing multi-channel or stereo high resolution audio of up to 24/96 5.1 or 24/192 resolution with video or still pictures. Some DVD-Audio discs also contain a DVD-Video portion.



### Super audio CD

High-resolution stereo or multi-channel audio. **Note:** some SACDs use a hybrid format with both a CD and a high resolution DSD layer.



### Compact Disc

Supports standard Red Book CDs, as well as HDCD and CD-R/RW.



High-definition digital video camera format, often in the form of a DVD±R or flash memory.

## Discs that cannot be played

- BDs with cartridge
- DVD-RAMs
- HD-DVDs
- Data portion of CD-Extras

DVDs / Blu-Rays with a different region code to the Blu-ray player you have purchased.

**Some DualDiscs:** A DualDisc is a two sided disc with DVD on one side and digital audio on the other side. The digital audio side does not generally meet the technical specifications of the Compact Disc Digital Audio (CD-DA) format so playback is not guaranteed.

Audio discs with copy-protection may not be playable.

### BD-ROM compatibility

Since the Blu-ray Disc specifications are new and evolving, some discs may not play properly depending on the disc type, version and encoding. It is possible that a Blu-ray disc manufactured after the player was manufactured uses certain new features of the Blu-ray Disc specifications. To ensure the best possible viewing experience, the player may need a firmware or software update from time to time.

### Copyright protection

This Product incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. The use of Rovi Corporation's copy protection technology in the product must be authorized by Rovi Corporation. Reverse engineering and disassembly are prohibited.

## Region management information

This player is designed and manufactured to respond to the region management information. If the region number of a BD-Video or DVD disc does not correspond to the region number of this player, this player cannot play the disc.

**BD-Video:** This player plays BD-Video with marks that match the code on the back of the unit (i.e. A, B or C).

Discs that have no region coding are also playable. These usually have all 3 region codes on the packaging in a pyramid.



**DVD-Video:** This player plays DVD-Video with marks that match the region code on the back of the unit (i.e. 1, 2, 3, 4 or 5).

Discs that are encoded for All regions are also playable.



## Cinavia notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2013 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

This update includes Cinavia® content protection technology. Information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

## Disc care and handling

To keep the disc clean from scratches or fingerprints, handle the disc by its edge. Do not touch the recording surface.

Blu-ray Discs record data in very high density and the record layer is very close to the disc surface. For this reason, Blu-ray Discs are more sensitive to dust and fingerprints than DVD. Should you encounter playback problems and see dirty spots on the disc surface, clean the disc with a cleaning cloth. Wipe the disc from the Center out along the radial direction. Do not wipe the disc in a circular motion.

Do not use record cleaning sprays or solvents such as benzene, thinner and anti-static spray.


Do not attach labels or stickers to discs as this may cause the disc to warp, become imbalanced or too thick, resulting in playback problems.

Avoid exposing the discs to direct sunlight or heat sources.

Do not use the following discs:

- Discs with exposed adhesive from removed stickers or labels. The disc may get stuck inside the player.
- Warped or cracked discs.
- Irregularly shaped discs, such as heart or business card shapes.

## Rear panel connections

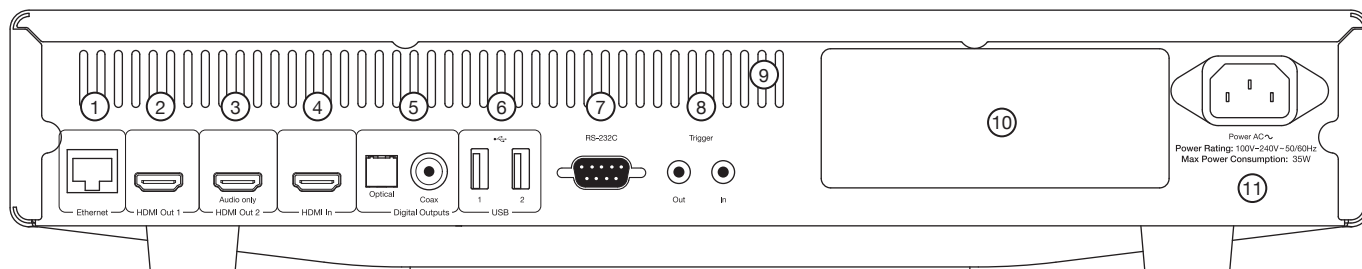

### 1. Ethernet LAN port

Used for Playback of content from the Internet or Network attached storage drives and servers, also used for discs supporting BD-Live that provide interactive features when the player is connected to the Internet.

### 2. HDMI output 1 (primary output)

The HDMI (High-Definition Multimedia Interface) is a purely digital connection that can carry both audio and video. Use a dedicated HDMI cable to connect to a TV/ Monitor or AV Receiver with a compatible HDMI input.

Always use a "HDMI 2.0 High Speed" certified Cable.

This output is the primary output and is 4K UHD compatible. HDMI 1 support Audio Return Channel from TVs that have this function. See later section.

### 3. HDMI output 2 (audio only)

### 4. HDMI input

This input is used to connect to a source device such as a set-top box or other HDMI Source.

### 5. Digital outputs

Optical and Coaxial digital audio outputs, optionally used to connect to a suitable Audio/Video Receiver for surround sound decoding (output must be set for "Bitstream". Refer to the "Audio setup" section). HDMI is however the preferred connection to AV Receivers as the latest lossless CODECS are only supported over HDMI. These outputs can also be used to connect to a separate DAC or digital recording device (output must be set for "LPCM". Refer to the "Audio setup" section).

**TOSlink Optical** – Use a high quality TOSlink fibre optic cable.

**S/P DIF Coaxial Digital** – Use a high quality 75 ohm digital RCA/Phono interconnect cable designed specifically for digital audio use.

### 6. USB 3.0 inputs

Port for interfacing to a flash/memory card or Mass Storage Device (such as a portable hard-drive).

#### Notes:

- This unit supports USB Mass Storage Class Bulk Player devices only. Most USB thumb drives, portable hard disk drives and card readers conform to this device class. Other USB devices such as MP3 players, digital cameras, and mobile phones that include their own memory management may not be compatible.
- Supported USB drives can be formatted with the FAT (File Allocation Table), FAT32, exFAT or NTFS (New Technology File System) file systems.
- In some cases, an incompatible USB device may cause the player to stop responding. If this occurs simply turn off the power, remove the USB device, and turn the player back on.
- The player accesses the USB drive in read-only mode. In order to minimize the risk of data corruption, it is recommended that you only unplug the USB device when playback has completely stopped.

### 7. RS232C

Used for control of the CXUHD in Custom Install situations.

### 8. Trigger out/in

The CXUHD can be turned on from Standby mode by a 5-12V DC trigger input. A trigger input will also produce a 12V DC trigger output.

### 9. Vent grille

Allows cooling of internal circuitry. DO NOT OBSTRUCT!


### 10. Wireless module

The built-in wireless module is compatible with 802.11B, G, N (2.4GHz), 802.11A, N, AC (5GHz).

### 11. AC power socket

Once you have made all audio and video connections, plug the IEC type AC power cable into the rear of the unit and an appropriate mains socket then switch on. Your CXUHD is now ready for use.

## Front panel controls

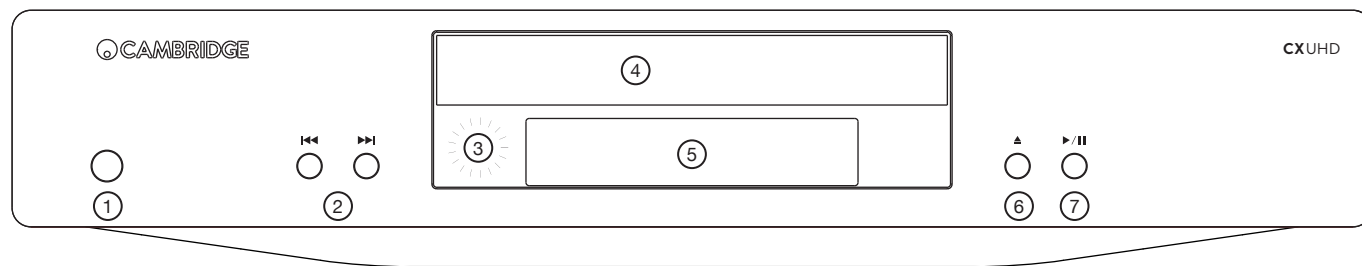

### 1. Standby/On

Switches the unit between Standby mode (indicated by a dim power LED) and On (indicated by a bright power LED). Standby is a low power mode where the power consumption is <0.5W. The unit should be left in Standby mode when not in use.

### 2. Skip

Press once to skip between tracks/chapters.

### 3. IR sensor

Receives IR commands from the supplied Navigator remote control. A clear unobstructed line of sight between the remote control and the sensor is required.

### 4. Disc tray

Use the Stop/Eject button to activate.

### 5. Display


Used to display the CXUHD's functions and playback state, etc. Please refer to the front panel display section below for more information.

### 6. Eject

Press to eject the disc.

### 7. Play/Pause

Plays the disc and pauses playback.

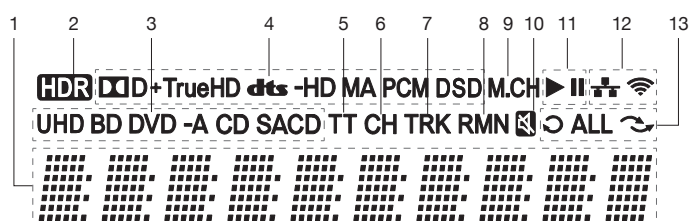

## Display

1. **Main display** – Text messages and numeric display
2. **HDR Icon** – Indicates the current playing content is High-Dynamic Range.
3. **Disc Type Indication** – Indicates the currently playing disc type
4. **Audio Type Indication** – Indicates the type of audio tracks being played
5. **Title** – When illuminated, the displayed time applies to a title
6. **Chapter** – When illuminated, the displayed time applies to a chapter
7. **Track** – When illuminated, the displayed time applies to a track
8. **Remaining** – When illuminated, the displayed time is the remaining play time
9. **Multi-channel Indication** – Indicates the audio being played is multi-channel surround
10. **Mute Icon** – Indicates that the audio is muted
11. **Playback Status** – Indicates playback status such as Play, Pause
12. **Network Status** – Indicates that the player is connected to a wired / wireless network
13. **Playback Modes** – Indicates playback modes such as Repeat, Repeat All, and Random Mode

## Remote control

The CXUHD is supplied with a remote control. Insert the supplied AAA batteries to activate.

### 1. Backlight button

Illuminates the buttons.

### 2. Open/Close

Press to Open or Close the disc loading drawer.

**Note:** Pressing Play when the drawer is open will also close the drawer.

### 3. Standby/On

Switches the unit between Standby mode (indicated by dim power LED) and On (indicated by bright power LED). Standby mode is a low power mode where the power consumption is less than 0.5 Watts. The unit should be left in Standby mode when not in use.

This product has APD (Auto Power Down) enabled as default. After inactivity of 30 minutes, the product will automatically switch to Standby. See later section for further details.

### 4. Info

Press to show/hide the on screen information display.

### 5. Page ▲ / Page ▼

Show previous/next page.

### 6. Numerical buttons

Used to enter numeric values such as the number of a desired chapter or track to go to.

### 7. Mute

(Cambridge Audio CXR/TVB2/TV2/CXA)

### 8. Clear

Press to remove current track programs.

### 9. Go To

Press once to bring up an OSD bar showing (from left to right) Playing Status, Title, Chapter, Time Counter, Progress Indicator, and Total Time. After pressing the Go To button for the first time, the cursor will be positioned at the Time Counter. This is the "Time Search" mode. Each subsequent press of the Go To button moves the cursor from Time to Chapter to Title and back round. Use the Numerical or Navigation button to enter the hours, minutes and seconds for your specified search and press the Enter button.

### 10. Volume

(Cambridge Audio CXR/TVB2/TV2/CXA).

### 11. Skip

**Right Skip** – Press once to skip forward by one track/ chapter on the disc.

**Left Skip** – Press once to skip backward by one track/ chapter on the disc.

### 12. Stop

Press to stop current playback.

### 13. Play/Pause


Press to play or pause playback.

### 14. Enter

Press to accept the item/function highlighted in the menu.

### 15. Navigation

Press the directional arrows to move around menus.

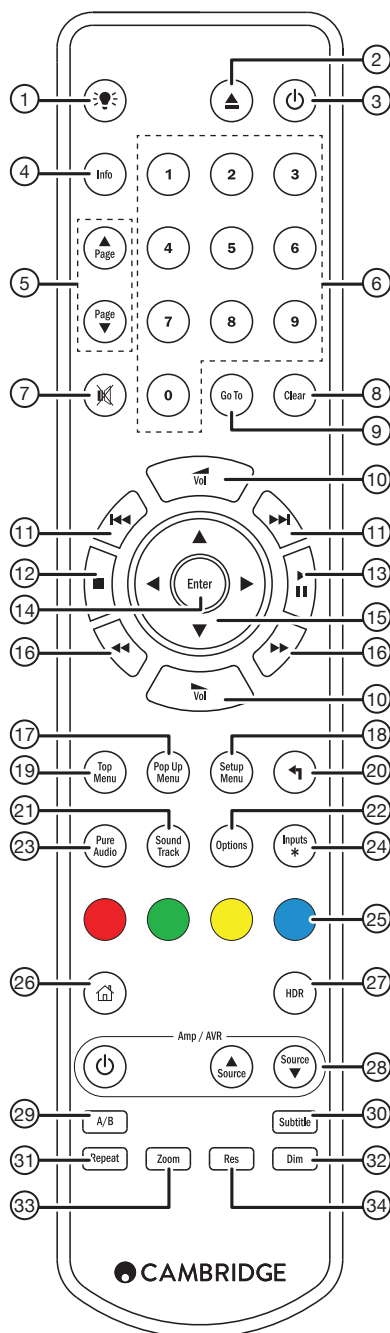

### 16. Scan

Scan forwards and backwards.

### 17. Pop up menu

Show BD pop-up menu or DVD menu.

### 18. Setup menu

Press to enter the Setup menu. Please refer to the "Blu-ray player setup" section of this manual for more information.

### 19. Top menu

Show BD top menu or DVD title menu.

### 20. Back

Press to return to the previous menu.

### 21. Sound track

Press to change soundtrack where available.

### 22. Options

For Blue-ray/DVD disc, Press to access Subtitle Adj, 3D, Zoom, Angle, PIP, SAP.

For CD disc, press to access Shuffle/Random, Repeat. This button varies by disc type.

### 23. Pure audio

Turn off the video outputs and Front panel display.

### 24. Inputs

Press to cycle between Playback from the BD player itself and the different digital inputs.

### 25. Colour buttons

These button functions varies See later section of the manual.

### 26. Home

Press to go to the Home menu. The home menu allows access to Playback from disc, connected hard-drives, network or the internet.

### 27. HDR

Choose the output mode for High-Dynamic Range content.

### 28. Amp/AVR control buttons

The CXUHD remote volume up down buttons can be made to control a Cambridge Audio amplifier or AV receiver.

**Note:** These buttons are by default set to transmit the codes for the CXUHD itself.

**For AV receiver mode,** remove the batteries and leave for 5 minutes before re-inserting the batteries while holding down the 'Red' button.

**For Amplifier mode,** remove the batteries and leave for 5 minutes before re-inserting the batteries while holding down the 'Green' button.

Once you have done this the Volume buttons will control your Cambridge Audio AV receiver or Amplifier instead. The buttons below will also be available as follows:

Press to switch the amplifier/AV receiver between Standby mode and On.

Press to scroll through the amplifier/AV source inputs one by one.

### 29. A/B

Press to mark a segment between A and B for repeated playback. The first press marks point A, the second press marks point B.

## Remote control cont.

### 30. Subtitle

Press to access subtitles where available.

### 31. Repeat

Press to access Repeat function. Each press will cycle as follows:

**DVD / DVD-Audio:** Repeat Chapter, Repeat Title, Repeat All, Repeat Off.

**Blu-ray Disc:** Repeat Chapter, Repeat Title, Repeat Off.

**CD / SACD:** Repeat One, Repeat All, Repeat Off.

### 32. Dim

Adjusts the brightness of the front panel display.

### 33. Zoom

Press to cycle through the various zoom magnifications (and back to normal display).

**Note:** Zoom features may not be available with certain DVD or Blu-ray discs.

### 34. Res

Press to switch the output resolution to the TV.

## Connecting to a wired network


The CXUHD supports the BD-Live feature offered on some Blu-ray Disc titles. BD-Live offers extra downloadable content and additional online interactive programs. The available BD-Live content varies by disc and studios, and may include additional subtitles, commentaries, movie trailers, games, and/or online chat.

Connecting the player to the Internet will also allow the player to obtain firmware updates via the Internet.

If the network storage drives or servers conforming to the UPnP AV or DLNA standards are connected to the network, these can also be accessed.

In order to utilize the BD-Live feature or update firmware via the Internet, the player needs to be connected to a broadband Internet connection. It is not necessary to connect to the Internet if you do not intend to use the BD-Live and online firmware updating functionality and only wish to use UPnP/DLNA.

### Ethernet connection

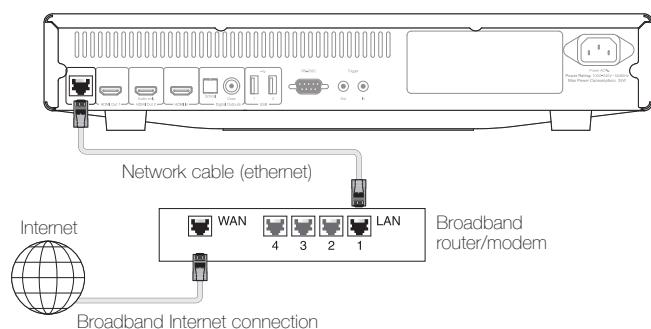

Plug one end of a network cable (Category 5/5E straight through Ethernet cable) into the LAN port on the back of the unit.


Plug the other end of the network cable into a LAN port on your broadband router or modem.

If you do not use DHCP (Auto IP), some network configuration may be required. Please refer to the Network Setup section of the manual for more details.

Refer to the operating instructions supplied with the broadband router or modem, or contact the Internet service provider for questions related to setting up of a router or modem.

**Note:** Only connect the LAN port of the player to an Ethernet port and support up to 1000 BASE-TX.

## Connecting to a wireless network

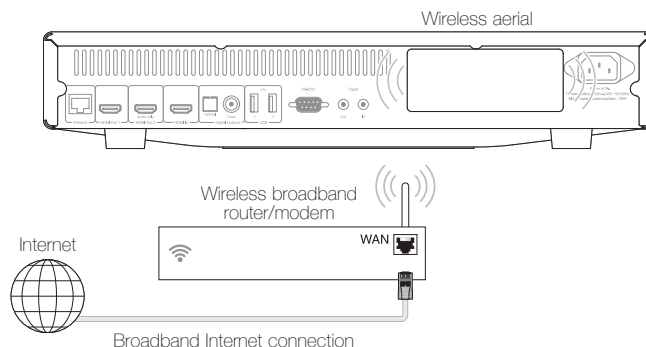

### Note:

- The built-in wireless module is compatible with 802.11B, G, N (2.4GHz), 802.11A, N, AC (5GHz).
- Make sure the broadband Internet connection is available and the Wi-Fi function on your wireless router or access point has been turned on.
- After connecting, some network configuration is required. Please refer to the 'Network Setup' section of this manual.

## Audio output connections

Do not plug in the mains power lead or turn the unit on until all connections have been made.


### Digital audio

The digital audio outputs should be used to decode the surround-sound soundtracks of BD/DVDs with an external AV Receiver (**Note:** Digital output must be set to "RAW" in the Audio setup page). The CXUHD sends an undecoded audio bitstream to the AV Receiver for decoding into 5.1/7.1 etc.

**Note:** The latest HD audio types, SACD and DVD-A cannot be output over SPDIF/TOSlink and an HDMI connection must be used for these.

Either a 75ohm coaxial cable designed for digital audio or a TOSlink fibre optic cable should be used (only one at a time).

**Note:** It is also possible to output stereo digital audio from the Digital Outputs for recording on conventional CD-R/MD etc. machines, see section on CXUHD setup.

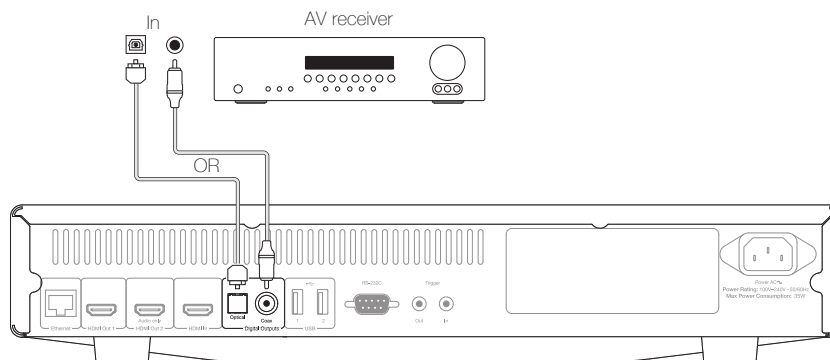


HDMI (High-Definition Multimedia Interface) is a digital connection that can carry both audio and video in one cable. Direct digital transfer of video and support for various types of high definition video content make this the best connection type for picture quality.

The CXUHD supports two HDMI outputs, HDMI Out 1 is capable of 4K UHD content into a compliant input of the 4K UHD TV and the HDMI Out 2 is audio only. For normal use with a single TV or TV and AV Receiver use HDMI Out 1 (Primary Output), as shown below.

**Note:** The Dolby Digital Plus, Dolby True HD, DTS HD High Resolution and DTS HD Master Audio can only be passed by the CXUHD over HDMI.

As HDMI can carry both digital audio and video, HDMI can be used to connect to AV receivers that support this function for external decoding.


- ① Direct connection to a TV for HDMI 1
- ② Connection to a TV via an AV Receiver for HDMI 1.

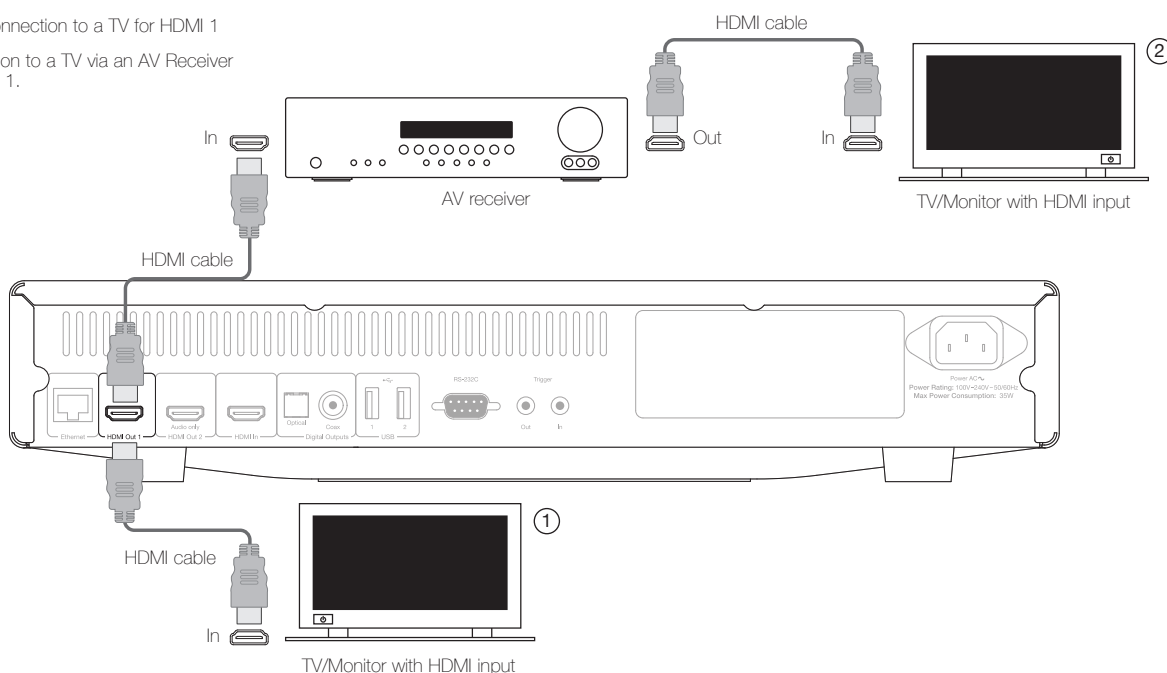

## HDMI connections cont.

### Connecting separately to a display and audio system using dual HDMI

The Dual HDMI connection mode ensures that you can enjoy the highest possible video quality and resolution, in addition to high bit rate audio content. Use an HDMI cable to connect the HDMI OUT (Main) output to your TV, and another HDMI cable to connect the HDMI OUT (Audio Only) output to your receiver.

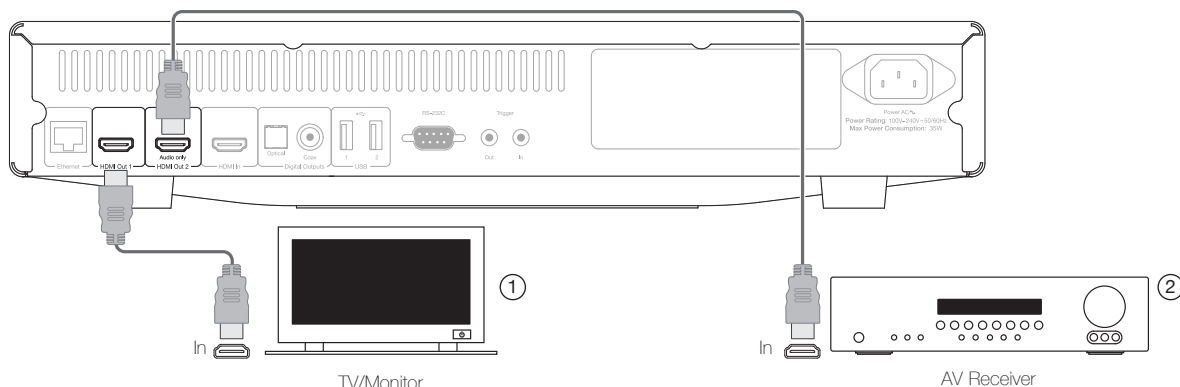

This configuration is recommended when you have a 3D or UHD compatible display, but your receiver is not 3D or UHD compatible. This configuration will allow you to send the video signal (3D or UHD in this case) directly to the TV and send the audio signal to the receiver.

① Connection to a TV/Monitor.

② Connection to an AV Receiver.

## Setting up the player

### Selecting the best output resolution

One of the major advantages of the CXUHD is its ability to play Ultra High-Definition Blu-ray video and also up-convert high-definition video and standard definition video to Ultra High-Definition. The player offers several standard, HD and UHD video output resolutions. For best results, it is important to select an output resolution that best matches your TV or display.

The rule of thumb when selecting an output resolution is to match the native resolution of your TV or display as closely as possible. The native resolution is the resolution of the actual display component in the TV, such as the OLED panel, Plasma panel, LCD panel, or DLP™ chip. The TV may accept input signals with lower or higher resolutions than its native resolution. In such cases, the electronics in the TV will upscale or downscale the video to fit its display component. Unfortunately, many TVs on the market only do an average job of scaling the video and if you set the CXUHD to output a resolution that matches or is very close to the native resolution of the TV, you are more likely to get a great picture. Most TVs or projectors can communicate their native resolution to the player via the HDMI connection, so setting the Output Resolution to Auto is generally the best choice for most customers. However in rare cases the TV or projector may not correctly present its native resolution, or the installer may decide a certain resolution works better. The CXUHD can be set to a fixed Custom Resolution if so desired.

For most new displays on the market, the best output resolution will be either UHD or 1080p. A few early model "1080p" displays did not accept a 1080p signal. For these displays, the best output resolution is 1080i. For small screen digital TVs this will likely be 720p. For even earlier CRT tube or rear projection TVs this will likely be 1080i. For EDTV displays (very rare if they have HDMI or DVI) this will be 480p (NTSC) or 576p

(PAL). These are general recommendations that work for most users, but there can be exceptions. Advanced users may want to try all supported resolutions and choose the one that provides the best result visually.

The CXUHD supports a special Source Direct mode through its HDMI outputs. This resolution is recommended for use with external video processors or high-end TVs. In Source Direct mode, the player works as a "player". It decodes video from the discs and then sends the raw video signal in its native resolution and format, without extra processing, to the external video processor or TV. The actual output resolution varies by content:

| Content                                          | Source Direct Output Resolution                                           |
|--------------------------------------------------|---------------------------------------------------------------------------|
| NTSC DVD                                         | 480i                                                                      |
| PAL DVD                                          | 576i                                                                      |
| Most Blu-ray movies (film-source)                | Ultra HD (4K) 23.976Hz or Ultra HD (4K) 24Hz 1080p 23.976Hz or 1080p 24Hz |
| Most Blu-ray TV shows or Concerts (video-source) | 1080i                                                                     |
| SACD and DVD-Audio                               | 1080p                                                                     |

The CXUHD allows the installer to choose a Custom Resolution in the Setup Menu. Customer can switch between the Auto output resolution and the pre-selected Custom Resolution by pressing the Resolution button on the remote control.

## Operating instructions

### Getting started

Turn on the power of the CXUHD, TV, amplifier/AV receiver and any other components which are connected to the CXUHD. Make sure the TV and the audio receiver are set to the correct input channel.

1. Press the Open/Close button to open the disc tray.
2. Place the disc on the tray, label side facing up.
3. The player will read the disc information and start playback.
4. Depending on the content of the disc, a menu or navigation screen may appear. Please use the Navigation  $\blacktriangle$   $\blacktriangledown$   $\blacktriangleleft$   $\blacktriangleright$  and Enter button to select the content to play.
5. To stop playback, press the  $\blacksquare$  button.
6. To turn off the player, press the Standby/On button.

#### Note:

- During DVD and some Blu-ray Disc playback, pressing the  $\blacksquare$  button for the first time brings the player to a pre-stop mode. You can resume playback from the stopped point by pressing the  $\blacktriangleright$ /II button. This pre-stop mode allows you to change the player settings and then resume playback. To completely stop playback, press the  $\blacksquare$  button twice.
- Certain Blu-ray Discs with BD-Java technology do not support the pre-stop mode. Pressing the  $\blacksquare$  button during playback of such discs will completely stop the disc. Pressing the  $\blacktriangleright$ /II button once the disc is stopped will restart it from the very beginning.
- This unit featured an environmentally friendly low power (<0.5W) standby circuit. If it is not to be used for a long time, unplug it from the household AC outlet.
- Do not put anything except a BD/DVD/CD sized disc into the tray, foreign objects may damage the mechanism.
- Do not force the tray by hand during the opening and closing operations.
- To avoid dirt and dust entering the mechanism, keep the disc tray closed when not in use.
- If the disc is seriously scratched or too dirty, the player may not be able to read it or play it.
- Never load more than one disc into the disc tray at one time.

**Disc info** – Searches the Gracenote online database and display the available disc information (an active internet connection is required).

## Options menu

Pressing the Options button on the remote during playback opens up a menu bar at the bottom of the screen for various settings and playback features.

Use the ◀ or ▶ buttons on the remote to highlight an item, then press the Enter button to confirm.

The Options menu selections differ depending on content type.

### Within music file playback

**Now Playing:** Go to the Now Playing interface for the track being played.

**Shuffle/Random:** Activate Shuffle or Random playback mode.

**Repeat:** Repeat the current track or all tracks.

**Add to Favourites:** Add the track to the first position in Favourites.

**Add to Playlist:** Add the track to a Playlist.

**Add All to Playlist:** Add all the tracks in the current folder to a Playlist.

**Goto Playlist:** View the playlist that the track is playing from.

**Locate:** Return to the MUSIC interface and highlight the track that is now playing.

**Program Play:** Play the tracks in the preferred sequence (only available with CD playback).

**Gapless Play:** Enable Gapless Playback mode. This feature supports APE, WAV, and FLAC files stored on an external USB drive.

**CUE Tracklist:** Show the tracklist of the selected CUE file.

### Within video discs (DVD, BD) and video file playback

**Subtitle Adjustment:** Set the subtitle display options.

**Color:** Set subtitle text color (only available on external subtitle files).

**Outline color:** Set the outline color for subtitle text (only available on external subtitle files).

**Size:** Set subtitle text size (only available on external subtitle file).

**Position:** Set subtitle display position.

**Sync:** Adjust the timing of the subtitles (only available on external subtitle files).

**Defaults:** Reset all subtitle options to their default values.

**Subtitle Setting:** Choose the desired subtitle language from all available subtitles.

**Audio Setting:** Choose the desired audio track from all available audio tracks.

**Picture Adjustment:** Show the Picture Adjustment menu.

**3D:** Enable 2D->3D conversion or open the 3D adjustment menu.

**Zoom:** Open the image Zoom Level menu.

**Angle:** Change the viewing angle. This function is only available when the DVD/BD is recorded with multiple angles.

**Repeat:** Repeat a particular Chapter, Title or Disc.

**Add to Favourites:** Add the video file to the first position in Favourites.

**A/V Sync:** Configure the time offset for audio / video synchronization.

**PIP (Picture in Picture):** Change the display mode to picture in picture mode.

**SAP (Secondary Audio Program):** Set the Secondary Audio Program mixing option to mix the Secondary Audio Program and menu sounds into the primary audio.

### Within photo file playback

**Zoom:** Display the image at different zoom levels.

**Transition:** Change slideshow transition effect.

**Rotate – Left / Right / Mirror / Flip:** Rotate the image on the screen.

**3D:** Enable 2D->3D conversion or open the 3D adjustment menu.

**Shuffle/Random:** Activate Shuffle or Random playback mode.

**Repeat:** Repeat the photo or all photos.

**Add to Favourites:** Add the photo to the first position in Favourites.

### Fast forward/rewind search

Press to toggle between 1X, 2X, 3X, 4X and 5X playback speed. Press the ◀ button for backward or the ▶ button for forward playback.

**Note:** Certain Blu-ray discs utilising the BD-Java technology may have their own fast forwarding and reversing control. The actual speed varies by disc, and a progress scale may be displayed by the disc.

### Skip playback

1. Press ►► to skip forward by track/chapter on the disc.

2. Press ◀◀ to skip backward by track/chapter on the disc.

### Go to

Press the Go To button on the remote once to access Time Search and enter the required time from the start of the disc as H:MM:SS (Hours, Minutes, Seconds) using the numerical keys or the (▲ ▼ ◀ ▶) navigational buttons. Press twice to access Chapter Time Selection and enter the required time from the start of the chapter. Press three times to access the Display information.

### Slow

When playing a BD/DVD, press the || button to pause playback and then press the ◀ or ▶ button to cycle round the various speeds of slow motion (1/16, 1/8, 1/4 and 1/2), forwards and backwards and back to normal speed. To exit playback, press the ▶/|| button.

**Note:** Certain Blu-ray discs utilising the BD-Java technology may not support slow playback.

### Pause and frame by frame

1. During playback, press the ▶/|| button to temporarily pause the program. In this mode, a Pause icon will appear on the TV screen.

2. While a DVD or Blu-ray Disc is paused, press the ◀◀ or ►► button to reverse or advance the video frame-by-frame.

3. Press the ▶/|| button to resume normal playback.

### Repeat

**Note:** The Repeat function is available only during playback.

Press the Repeat button to access Repeat function. When pressed repeatedly the Repeat function will cycle as follows:

**DVD and DVD-Audio:** Repeat Chapter, Repeat Title, Repeat All, Repeat Off.

**Blu-ray Disc:** Repeat Chapter, Repeat Title, Repeat Off.

**CD and SACD:** Repeat One, Repeat All, Repeat Off.

**Note:** The repeat chapter/title setting will be cleared when moving to other chapter or title. Certain Blu-ray discs may not allow the Repeat function.

### A-B repeat

1. Press the A-B button at your desired starting point. "A" appears briefly on the TV screen.

2. Press the A-B button at your desired end point. "A-B" appears briefly on the TV screen, and the repeat sequence begins.

3. To exit the sequence, press the A-B button.

**Note:**

- The A-B repeat section can only be set within the current title (for BD/DVD video) or current track (for BD/DVD audio, Video 1CD and Audio CD).

- A-B repeat playback is not available with some scenes on BD/DVD.

- A-B repeat playback does not function during title, chapter, track or all repeat playback.

## On-screen display

1. During the playback of a DVD or Blu-ray Disc, press the **Info** button on the remote control to show its media information and HDMI output format. For CDs and SACDs, the status information is shown automatically.
2. When the status information is shown, press the **▲ ▼** buttons to scroll through several different display formats. The playback time information displayed on the front panel changes together with the on-screen display.
3. Press and hold the **Info** button for 3 seconds to show more detailed Media Playback, Media Information, and HDMI Output information.
4. Press the **Info** button again to hide the on-screen display. The playback time information display on the front panel will remain in the selected format.

In addition to the playback time, the on-screen display may also contain the following information about the content currently playing:

**Playback status:** an icon indicating play, pause, and fast forward/reverse status.

**Bit rate meter:** an indication of the bit rate of the audio and video stream.

Current and total title numbers. (DVD and Blu-ray Discs)

Current and total chapter numbers of the current title. (DVD and Blu-ray Discs)

Current and total tracks. (CDs and SACDs)

**Video format information:** resolution, frame rate, HDR format, color space, codec, original aspect ratio, peak brightness.

**Subtitle information:** current and total available number of subtitle tracks and language.

**Audio information:** current and total available number of audio tracks, language, format, and channels.

**HDMI output information:** video output resolution, frame rate, HDR format, color space, aspect ratio, audio output format, sample rate, bit depth and channels.

## Audio language (soundtrack) selection

1. To select the audio language, press the Soundtrack button on the remote control during playback.
2. Repeatedly pressing the Soundtrack button cycles through all available audio soundtracks on the disc.

**Note:** Availability of languages and audio channels varies by disc. Some DVD-Audio discs allow audio track selection with the Soundtrack button, while others require the user to choose from the audio setup menu of the disc. When playing an SACD with both multi-channel and stereo content, the Soundtrack button can be used to switch between the two formats.

## Subtitle selection

1. When playing a DVD, Blu-ray disc or other video programs recorded with subtitles, press the Subtitle button on the remote control to select the desired subtitle.
2. Repeatedly pressing the Subtitle button will cycle through all available subtitles.
3. To turn off subtitles, press the Subtitle button and select Off from the list.

## Angle selection

1. Press the Option button on the remote control to select the desired playing angle.
2. Use the Navigation buttons and select Angle from the available options.

**Note:** This function is available only when the discs are recorded with multiple angles. The Angle mark display shows when an alternative angle is available. The Angle mark display on the screen can be turned off using the Setup menu of the player.

## Zoom

To change the zoom level, press the Zoom button on the remote control repeatedly pressing the Zoom button will switch the zoom level in the following sequence: 1:1 (No zoom), Stretch/Compress, Full Screen, Under Scan, 1.2X, 1.3X, 1.5X, 2X, 1/2X.

The zoom level is reset to 1:1 when the disc is ejected, or when the player is turned off.

**Note:** The Zoom feature may not be available when certain DVD or Blu-ray Discs are played because the disc author chooses to disable Zoom.

## Blu-ray disc menu

1. Blu-ray discs usually contain a top menu and a pop-up menu. The top menu normally appears at the beginning of the playback, after the previews and copyright messages and allows access to different film presentations or extras etc. The Pop-up menu can be accessed during playback without interruption and usually allows access to different chapters with in a film.
2. During playback, press the Pop-up menu button to access the pop-up menu. Press the Top menu button to access the top menu.
3. Navigate the menu using the (**▲ ▼ ◀ ▶**) Navigation buttons, and then press the Enter button to make the selection.
4. Some menus make use of the colour buttons. You can select menu functions by pressing the corresponding Colour button on the remote control.

## DVD disc menu

1. Some DVD discs also contain title menu or chapter menu functions.
2. During playback, press the Top menu button to return to the disc title menu. Press the Pop-Up menu button to display the chapter menu. Depending on the disc, one or both menus may not exist.
3. Navigate the menu using the (**▲ ▼ ◀ ▶**) Navigation buttons, and then press the Enter button to make the selection.
4. Press the Return button to return to the previous menu. The return location varies by disc.

## Memory and automatic resume

The player automatically remembers the current position for a disc when playback is interrupted. Operations such as Open/Eject or turning Power off will cause the player to save the current playing position for that disc.

The position is memorised even after turning off the unit or changing the disc.

When the next time the same disc is played back, the player will recognize the saved playing position. Playback will automatically resume from this saved position. However if you wish to cancel the automatic resume and start playback from the beginning, you may press the **■** button when prompted.

The player can remember playback position for up to five discs. When the sixth disc is memorised, the oldest one is replaced.

**Note:** Some Blu-ray discs do not support resuming and will always play from the beginning.

## HDMI input selection

1. Press the Inputs button on the remote to bring up the "Input" source menu.
2. Use the **▲/▼** buttons to choose the required digital input from the list.
3. You can always select the Blu-ray player to return to home menu for disc or file playback.

| Input             |
|-------------------|
| 1. BLU-RAY PLAYER |
| ● 2. HDMI IN      |
| 3. ARC: HDMI OUT  |

## Audio Return Channel (ARC) selection

1. The ARC source is also available in the Inputs menu. Press the Inputs button on the remote to bring up the Input Source menu.
2. Use the **▲/▼** buttons to choose the required ARC channel.
3. You can always select Blu-ray Player to return to the CXUHD home menu for disc or file Playback.

| Input              |
|--------------------|
| 1. BLU-RAY PLAYER  |
| 2. HDMI IN         |
| ● 3. ARC: HDMI OUT |

**Notes:**

- Audio Return Channel (ARC) is a feature introduced in HDMI v1.4, which allows you to send digital audio signals from the television back to the player or receiver. Instead of listening through TV speakers, ARC allows the sound to be processed and produced by the home theater audio system.
- An HDMI 1.4 cable is required and you need to make sure the HDMI input port on the TV is ARC capable. Usually, ARC has to be enabled in the TV's settings.
- Volume control does not apply to the digital audio/video outputs (HDMI, Coaxial and Optical). The remote can alternatively be made to control the volume (plus source change, mute, on/off and zone 2 where available) of most CX range AV Receivers and amplifiers. See the previous section on the remote control for full details.

**Playback by chapter or track number**

During the playback of a disc, you can use the numerical buttons on the remote control to directly jump to a specified chapter or track number. For example:

1. To select the seventh track, press the number 7 button on the remote.
2. To select the 16th track, press the number 1 button followed by the number 6 button in quick succession.

**Note:** Certain DVD-Audio and Blu-ray Discs may not allow for direct chapter selection.

**Playback from a specific location on DVD and Blu-ray discs**

During the playback of a DVD or Blu-ray Disc, you may specify a location to start playback by entering the title, chapter or time directly. Press the GoTo button to bring up the on-screen display.

At the top of the video screen, an on-screen display status banner will appear with the following components (from left to right): Playing Status, Title (for instance 1/2 meaning 1st of 2 titles currently playing), Chapter (for instance 3/12 meaning the 3rd of 12 chapters is currently playing), the Time Counter, a Progress Indicator bar, and the Total Time.

After pressing the Go To button for the first time, the cursor will be positioned at the Time Counter. This is the Time Search mode.

Each subsequent press of the Go To button will switch the search mode in the following sequence: Chapter Search, Title Search and back to Time Search. The back and forward arrows can also be used to switch between the different modes.

1. **Time search:** Searches for a specific time within the currently playing title. Use the Number or Arrow buttons to enter the hours, minutes and seconds for your specific search and press the Enter button to go there.
2. **Chapter search:** Allows you to search for a particular chapter. Use the Number or Arrow buttons to enter or select the chapter number and press the Enter button to go there.
3. **Title search:** Allows you to search for a particular title. Use the Number or Arrow buttons to enter or select the title number and press the Enter button to go there.

**Notes:**

- Some discs may prohibit the search operation. You will not be able to select a search location, or you may get an "invalid operation" icon after specifying a search location.
- Some Blu-ray Discs feature their own search.

**BONUS VIEW™****Picture-in-Picture and secondary audio**

Certain Blu-ray discs contain secondary video (Picture-in-Picture/PIP) and secondary audio. This feature is often called BONUSVIEW. When such a disc is played, a Picture-in-Picture mark (PIP Mark) and a Secondary Audio Program Mark (SAP Mark) may be displayed on the screen to alert you to the availability of the secondary audio/video content.

The disc menu usually features interactive controls to turn on/off the Picture-in-Picture video and Secondary Audio Program. Please use those controls to select the desired secondary audio/video content.

Both PIP and SAP functions can be accessed via the Option button on the remote. Please use this button to turn the function on/off or select from multiple secondary audio tracks. Secondary Audio Programs are generally only available when Picture-in-Picture is shown.

**Note:**

- This function is available only when the discs are recorded with secondary video and audio programs.
- The PIP and SAP Marks on the screen (which alert the user to the presence of these functions on the disc) can be turned off using the Setup menu of the player.



Some Blu-ray disc titles are released with the BD-Live feature. BD-Live offers extra downloadable contents and additional online interactive programs. The available BD-Live content varies by disc and studio, and may include additional subtitles, commentaries, preview trailers, games, and online chat. The player needs to be connected to the Internet in order to play BD-Live contents.

Depending on how the studios organise their BD-Live contents, some Blu-ray discs may start downloading BD-Live content when playback starts; some have a BD-Live selection on its main menu; some may show a prompt to ask whether you would like to start downloading; and some may ask you to sign up for a membership or account. Please follow the instructions that come with the disc to enjoy BD-Live contents.

Your Internet connection speed, the overall Internet traffic situation and the capacity of the BD-Live content servers can all affect how fast BD-Live content can be downloaded. If you encounter slow downloading or intermittent playback, please play the disc without accessing the BD-Live features, or try again at a different time.

When you use the BD-Live feature, the player or disc ID and your IP (Internet Protocol) address may be sent to the content provider via the Internet. Generally, no personally identifiable information is sent. However technologies exist to match your IP address to a certain geographical area or service provider. Your Internet service provider also has the knowledge of who is using which IP address. If the BD-Live content provider requires you to login using a membership or account, the content provider will have access to your membership or account information. Please check with your Internet service provider and the BD-Live content providers for their privacy policy.

You can also choose to restrict BD-Live access using the player's Setup menu.

## Viewing pictures on DVD-Audio discs

Some DVD-Audio discs contain static pictures, such as photos of the band or narration of the album. When a DVD-Audio track is playing, you may use the Page  and Page  buttons to select the picture.

**Note:** Availability of static pictures depends on the DVD-Audio disc.

## Pure audio mode

You can enjoy higher quality audio by turning off the video processing and front panel display. The Pure Audio mode reduces any potential interference between the video and audio signals.

1. Press the Pure Audio button on the remote control to turn off video and enter Pure Audio mode. Video output will be turned off.
2. Press the Pure Audio button again to resume video and cancel Pure Audio mode.

**Note:**

- Pure Audio mode is automatically cancelled when the unit is switched off or when playback is stopped.
- Since HDMI carries audio together with video, the HDMI output cannot be completely turned off. A black screen (inactive video but sync is still present) is transmitted instead to minimize any potential interference.

## Shuffle and random modes

When playing a CD or SACD, press the Blue button on the remote control to activate the Shuffle and Random modes. Each press of the Blue button switches the playback mode in the following sequence: Shuffle, Random and Normal.

**Note:** Selecting the Shuffle or Random mode cancels any Repeat mode you may be using. Similarly, selecting a Repeat mode cancels any Shuffle or Random mode.

## Media playback from USB devices

As well as normal CD's, SACD's, DVD's and BD's the CXUHD can play some music, movies and photo files either from optical data discs (such as CD-R, DVD-R etc.) or external memory such as USB flash-drives/thumb-drives or hard-drives.

### Connecting a USB drive

The CXUHD is equipped with two USB 3.0 ports. You may use any USB port to plug in a USB drive loaded with digital music, movies and photo files.

The USB ports are rated to provide a maximum of 5V, 1A power to the attached device. This is usually sufficient to bus power (i.e. self power) USB flash drives and flash memory card readers, but may not be sufficient for all USB hard disks.

**Note:**

- This unit supports Mass Storage Class Bulk Player devices only. Most USB thumb drives, portable hard disk drives and card readers conform to this device class. Other devices such as MP3 players, digital cameras, and mobile phones that include their own memory management may not be compatible.
- Supported USB drives can be formatted with the FAT (File Allocation Table), FAT32, exFAT or NTFS (New Technology File System) file systems.
- In some cases, an incompatible device may cause the player to stop responding. If this occurs simply turn off the power, remove the device, and turn the player back on.
- The player accesses the USB drive in read-only mode. In order to minimize the risk of data corruption, it is recommended that you only unplug the USB device when playback has completely stopped.

## Network media playback

The CXUHD can remotely Playback music, photos, and video files stored on media devices that are connected to the same home net work. Set the My Network selection to On in the Setup menu. Press the  button on the remote to bring up the Home menu, select the Network icon and press Enter button to show the list of available servers and shared folders. In some cases, you might need to disable your firewall to allow the CXUHD to see your devices.

The CXUHD can perform Network Playback in one of the following three ways:

**As a digital media player (DMP):** the CXUHD can actively search, access and pull content from media servers on you network.


**As a digital media renderer (DMR):** the CXUHD plays content received ('pushed') from a digital media controller (DMC). A DMC-capable UPNP/DNLA media server is required. Plus the control APP you wish to use which must be connected to the same network as the server and CXUHD. Refer to the server and APP's respective user instructions for correct configuration and operation.

**Accessing a SMB/CIFS client:** the player can directly access files shared by computers through SMB/CIFS clients over the network, as if accessing a local USB hard drive. Most computers especially those installed with Windows, already have an SMB client embedded. Please refer to your respective OS instructions to set up the SMB/CIFS shared file/folder.

**Note:**

- A NAS is a network attached storage device that provides file-based data storage services to other devices on the network. Commercial products are available that often incorporate a UPnP/DNLA Server.
- SMB (Server Message Block) or CIFS (Common Internet File System) is mostly known as the folder sharing method of Microsoft Windows. It does not require an extra media server or perform any media format transcoding.
- Compatibility with local network sharing hardware/software is on a best effort basis with no guarantee, due to variations in NAS devices, media servers and their configurations

## Using the home menu

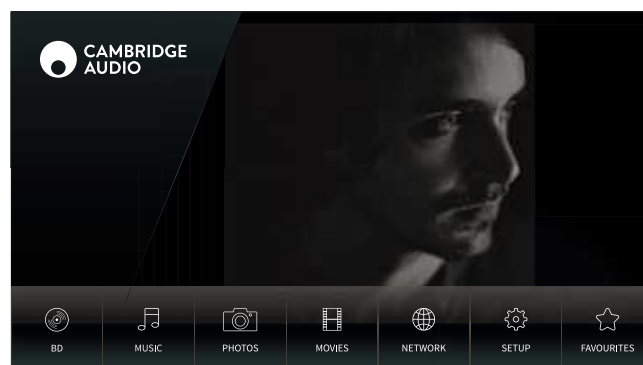

The CXUHD presents a Home Menu to assist you in navigating and playing media files from an inserted optical disc, USB flash drive, external hard drive, home network sharing. Basically, the Home Menu is the starting point for accessing media files.

You can bring up the Home Menu with the HOME button on the remote control. Currently there are seven selections:

**Disc** enables the player to start playback of an inserted optical disc.

**Music, Movies and Photos** allow you to access corresponding type of media files from a connected USB drive and inserted data disc.


**Network** enables the player to stream audio, video and photos from media servers on the home network. Compatible hardware and software may be required.

**Setup** brings the player's Setup Menu, just like pressing the SETUP button on the remote.


**Favorites** provides you with a shortcut to access folders or files you love or often access.

## Playing music files

To play digital music files stored on an optical disc or USB drive, select "Music" from the Home menu. A file browser will appear to assist you in navigating the files and folders.

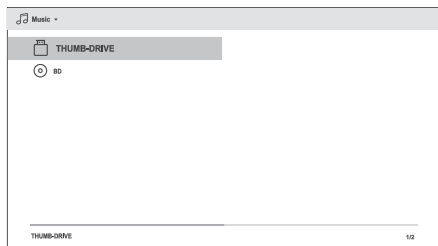

The first step is to select the "Data Disc" or USB device that contains the music files. The player will take a moment to read the disc and list the folders and music files.

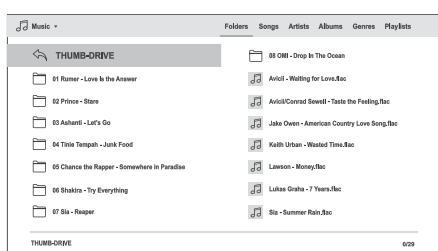

In the music browser, you can perform the following operations:

Press the ▲/▼ button to move the cursor and select music files.

Press the Options button to gain access to features such as music information and sort order. For more details, see later section of the manual.

Press the Top menu button to move the cursor directly to the Category Menu at the top of the screen. The Category Menu contains the following choices:

**Media Type Filter** – Allows you to easily access the movie or photo files in the same folder by selecting Movies or Photos in the Media Type Filter at the top left corner of the screen.

**Sort** – Sort and display the music files and folders according to the selected category at the top right corner of the screen. The categories include Folders, Songs, Artists, Albums, Genres, and Playlists.

When a music file is highlighted by the cursor, press the ► button to start playback.

**Note:** When a data disc or USB drive is inserted, the player automatically starts indexing files and build a database in the background. Depending on the number and size of files, this process could take up to several minutes. Customers can only access the Category list (Artist, Album and Genre) when the database has been built, otherwise, a warning message will appear.

If a music file starts playing and there is no other user operation, the Now Playing screen will appear after a few seconds. You can also get to this screen by pressing the Options button and then selecting Now Playing. This screen provides the following information:

**Shows playback status** – ►, ■, II, Track and Time.

**Display and change playback mode** – Shuffle/Random, Repeat One and Repeat All.

**Music information** – Displays information like album art and tags.

The following operations are available while the Now Playing screen is shown:



**Normal playback control** – ►, ■, II, ◀, and ▶.

**Special playback modes** – Repeat and Shuffle/Random (Blue colour button).


Press the Options button to access the Option menu. For more details, see later section of the manual.

**Return to the browser without stopping the music:** Press the Return button.


**Stop playback and return to the browser:** Press the ■ button once.

## Playing movie files

To play movie files stored on an optical disc or USB drive, select Movie from the Home menu. A file browser will appear to assist you in navigating through the files and folders.

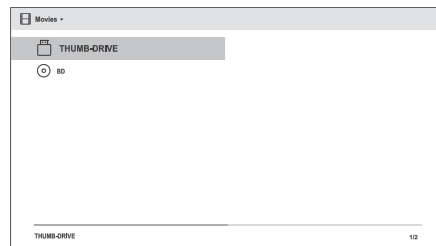

The first step is to select the Data Disc or USB device that contains the movie files. The player will take a moment to read the media and list the folders and movie files.

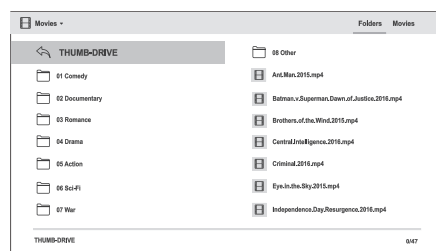

In the movie browser, you can perform the following operations:

1. Press the ▲/▼ buttons to move the cursor and select the movie file.
2. Press the Top menu button to move the cursor to the category menu in the top of the screen. This menu function is the same as the one discussed in "Playing music files" on the previous section.
3. When a movie file is highlighted by the cursor, press the Enter or ► buttons to start playback.


Once a movie file starts playing, the normal playback control functions are available:

To stop the movie and return to the file browser, press the ■ button. You can also press the Home button at any time to stop the playback and return to the Home menu.


Press the Option button to access features such as Subtitle Shift, 3D and Picture Zooming. For more details, see later section of the manual.

## Viewing photo files

To view digital photo files stored on an optical disc or USB drive, select Photo from the Home menu. A file browser will appear to assist you in navigate the files and folders.

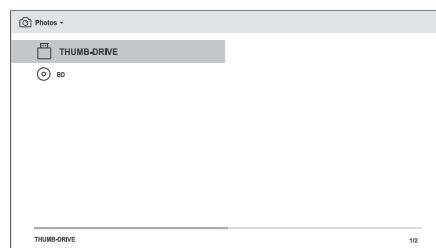

The first step is to select the Data Disc or USB device that contains the photo files. The player will take a moment to read the media and list the folders and photo files.

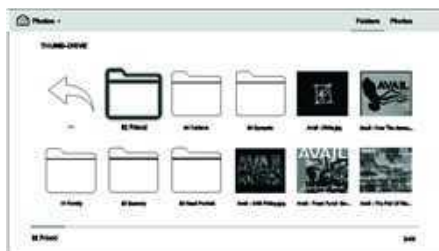

In the photo browser, you can perform the following operations:

1. Press the ▲/▼ button to move the cursor and select photo files.
2. Press the Top menu button to move the cursor to the category menu in the top of the screen.
3. When a photo file is highlighted by the cursor, press the Enter or ► button to play back the photos as a full screen slideshow.

The following operations are available during the photo slideshow:

**Display the help screen** – Info button.

**Normal playback controls** – ►, ■, II, ◀/▶ buttons.

**Adjust slideshow speed** – ◀◀ and ▶▶ buttons.

**Zoom** – Zoom. Once zoomed in, the ▲▲▼▼► navigational buttons can be used to pan around the photo.

**Reflect** (flips the photo horizontally to make it upside-down) – ▲ button.

**Mirror** (flips the photo vertically to make it a mirror image) – ▼ button.

**Rotate left** (counterclockwise) – ◀ button.

**Rotate right** (clockwise) – ▶ button.

**Repeat** – Repeat button.

**Show photos in Digest mode** – Red colour button. The Digest mode shows the photo thumbnails on the screen to make visual navigation easy.

**Show EXIF information** – Green colour button

**Play in random sequence** – Blue colour button

**Change slideshow transition effect** – Yellow colour button.

Press the Options button to access the features like Image Zooming and Image Rotation. For more details, see later section of the manual.

## Adding background music

You can also add background music to the photo slideshow. To do so, you will need to prepare digital music files. The music files can be stored on the same disk as the photos, or on a different USB drive. Start music playback first by selecting Music from the Home menu. Once the music is playing, press the Home button to get back to the Home menu, and start the photo slideshow by selecting Photo in the usual manner.

## Setup menu

To access the player's setup menu simply press the Setup menu button on the remote control. Since some Setup menu options can become inaccessible when the player is playing a disc, it is recommended that you operate the Setup menu when playback is fully stopped or when there is no disc in the player.


The Setup menu presents many setup and configuration options. For most users, the default configuration will be sufficient and will often not require changes to the settings.

However if you wish to configure the player to perfectly match your home theatre settings and viewing preferences, please refer to the following sections for details about each configuration option.

### Using the setup menu system

When performing menu adjustments, we will use the following terminology to indicate the location of the desired function:

Setup menu section > Menu item > Selection

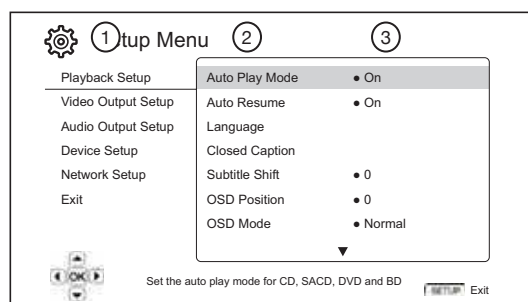

**1. Setup menu section** is the uppermost menu level. With the CXUHD there are six Setup menu sections listed in the left column of the Setup menu screen. These are: Playback Setup, Video Setup, Audio Format Setup, Audio Processing, Device Setup, and Network Setup.


**2. Menu item** is the parameter to be adjusted which appears in the Center column of the Setup menu. Once you enter a Setup menu Section, the list of menu items and their current value are displayed in a box.

**3. Selection** is the actual numeric or descriptive element that represents the change being made to the selected parameter. It is the item located to the right of its corresponding menu item.

A scroll icon appears at the top or bottom of the menu when there are more menu items or Selections than what can fit in a screen. You may use the ▲ and ▼ buttons to scroll the display in order to access additional items.


**Note:** It is possible that some setup items are greyed-out and inaccessible. This can be caused by a disc still being played back or interlocking with mutually exclusive setup items. Please stop playback or eject the disc before trying to change these setup items. If you still cannot access the setup item, please check for configuration conflicts and consistency. For example, if "Video Setup > 1080p24 Output" is set to "Off", the "DVD 24p conversion" menu items "Auto" and "Source Direct" will be greyed-out. Setting "1080p24 Output" to "On" will enable the "DVD 24p conversion" menu items "Auto" and "Source Direct" to be set.

1. Press the Setup menu button on the remote control, and the TV screen displays the following:

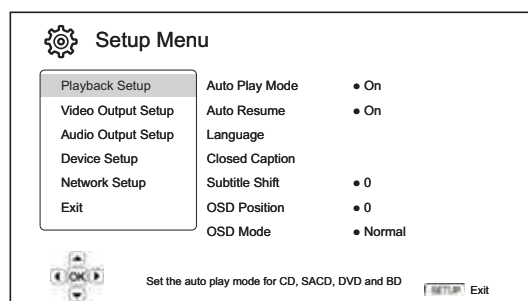

2. Press the ▲/▼ buttons to select the section. There are six sections: Playback Setup, Video Setup, Audio Format Setup, Audio Processing, Device Setup, and Network Setup. Press the Enter button or the ► button to enter the selected section.
3. Press the ▲/▼ buttons to select the setup item to be changed, and press the Enter or ► button to change the setting. When the scroll icon is shown at the top or bottom of the Setup menu, it indicates that there are more menu items that can be accessed by scrolling with the ▲/▼ buttons.


- To select a value from the list of available settings, press the  $\blacktriangle/\blacktriangledown$  buttons and then press the Enter button to confirm. For example, to select "On" for "Auto Play Mode", use the  $\blacktriangle/\blacktriangledown$  buttons to highlight the "On" selection and press the Enter button.

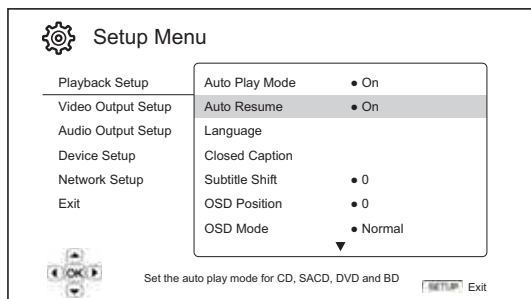

- To exit the Setup menu at any time, press the Setup menu button on the remote control or select Exit from the Setup menu sections.

The settings are permanently saved when the player is turned off using either the front panel Standby/On button or the same button on the remote control. If the AC power is interrupted before the player enters standby status, the settings will not be saved.

## Playback setup

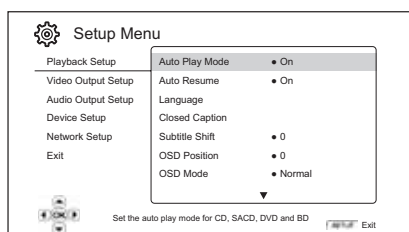

The "Playback Setup" section is designed to configure playback preferences for various contents.

### 1. Auto play mode (on/off)

To select whether the player will start playing an audio CD or SACD automatically. When auto play mode is turned on (**default**), discs will start playing upon insertion into the player. When auto play mode is turned off, the player will wait for the user to start playback by pressing the Play button.

### 2. Auto resume (on/off)

To select whether the disc playback shall start from the previously saved point or not. This setting applies to CD, SACD, DVD and certain Blu-ray disc. When auto resume is turned on (**default**), the playback automatically starts from the previously saved point. When auto resume is turned off, the playback starts from the beginning.

### 3. Language

This is used to configure language preferences:

**Player Language** – To choose the display language for the player's Setup Menu and on-screen display.

**Disc Menu Language** – To choose the preferred language for displaying DVD and Blu-ray Disc menus. If a disc menu of the selected language is available, that menu will be shown instead of the default disc menu.

**Audio Language** – To choose the preferred audio language for DVD and Blu-ray Discs. If an audio track of the selected language is available on the disc, the Audio track will be played back.

**Subtitle Language** – To choose the preferred subtitle language for DVD. If a subtitle of the selected language is available on the disc, it will be displayed. When "Auto" is selected, the subtitle display is decided by the disc.

**Note:** If your preferred language is not listed in the Disc, Audio or Subtitle menu options, select "Other" and enter the Language Code found on the later section of this manual.

## 4. Closed caption

Configure Closed Caption features.

**CC Display** – Turn on or off Closed Caption display.

**CC Select** – Select the data channel for Closed Caption display. Available data channels depend on the content being played.

**CC Attribute** – Set the Closed Caption attribute. When CC Attribute is set to Custom you may configure the Closed Caption display attributes listed below.

**Font Color** – Set the font color for Closed Caption.

**Font Size** – Set the font size for Closed Caption.

**Font Style** – Set the font style for Closed Caption.

**Font Opacity** – Set the font opacity for Closed Caption.

**Font Edge** – Set the font edge effect for Closed Caption.

**Font Edge Color** – Set the font edge color for Closed Caption.

**BG Color** – Set the background color for Closed Caption.

**BG Opacity** – Set the background opacity for Closed Caption.

**Window Color** – Set the Closed Caption window color.

**Window Opacity** – Set the Closed Caption window opacity.

## 5. Subtitle shift

Sometimes such as when using a 2.35:1 "Constant Image Height" video projection system, subtitles may get cut off because they are positioned outside of the active video area.

The Subtitle Shift feature can be used to shift subtitles up or down so they are displayed within the active video area.

To shift the display position of subtitles, follow these steps:

- When playing a DVD, Blu-ray Disc or other video programs recorded with subtitles, select the desired subtitle from the disc menu or by using the remote.
- Press and hold the Subtitle button on the remote control until the Shift Subtitle Position prompt appears on the screen.
- Wait until some subtitle text is visible on the screen, and then use the  $\blacktriangle/\blacktriangledown$  buttons to move the subtitle text to a desired new position.
- Press the Enter button to set the subtitle display position. Once the Subtitle Shift position is set, it is saved by the player in the Video Setup > Display Options > Subtitle Shift setup menu option. The setting will be applied to subtitles of all future DVD and Blu-ray Discs. You can also change the setup menu item directly. Refer to the Video Setup for more information.

## 6. OSD position

Allows you to set the display position for the on-screen display (OSD).

When the OSD Position is set to 0, the OSD is shown at the top and bottom of the video screen. When it is set at a value between 1 and 5, the OSD is shifted towards the center of the video screen.

Similar to the subtitle shift setting above, the OSD Position feature is helpful for customers using a 2.35:1 "Constant Image Height" video projection system.

## 7. OSD mode

Allows you to select how long the on-screen display (OSD) information, such as playback operation icons (PAUSE, STOP, SKIP, etc.), stays on the TV screen.

**Normal (default)** – OSD information stays on the TV screen until the user cancels it.

**Minimal** – OSD information stays on the TV screen for a few seconds and then disappears. The front panel display still maintains the selected display information.

**Remaining** – OSD information stays on the TV screen until the user cancels it. By default, displays remaining time instead of elapsed time.

**Off** – No OSD information shows on the TV screen unless the user presses the Info button. This mode is not recommended for daily use

## 8. Angle mark (on/off)

Turns on/off the display of the angle icon when a DVD or Blu-ray Disc with multiple angles is played. Keeping the angle mark off avoids distraction from normal movie watching.

## 9. Screen saver

Allows you to turn on/off the screen saver function. The screen saver is designed to minimize burn-in concerns for plasma and CRT display devices.

**On (default)** – After about 3 minutes of inactivity, the player will show an animated logo moving on a black background. This allows most areas of the screen time to rest and gives all areas an equal opportunity to refresh.

**Off** – The screen saver will not be activated. Only use this option if your TV does not have any burn-in issues.

**Energy Saver** – Video output will be turned off after 3 minutes of inactivity. Many projectors and LCD TVs will go into a standby or sleep mode and turn off their projection lamp or LCD backlight lamp, thus saving energy and prolonging the lamp life. When you press any button on the remote control or the player's front panel, the screen saver will be canceled and video output will be restored. If your TV is already in standby or sleep mode, you may need to wake up the TV by pressing a button on its remote or control panel.

## 10. Parental control

This is used to set parental control ratings in order to prevent minors from watching inappropriate content. This function does depend on the disc being properly rated and encoded.

Press the Enter button to bring up the rating selection menu.

To adjust the parental control settings, you must enter the current parental control password. If you have not set a parental control password yet, the default password is "0000".

The parental control menu contains the following sub-items:


**BD Ratings** – Use the Navigation buttons to select the rating allowed for Blu-ray Discs. "Off" means no ratings control and all discs are allowed to play. Numbers 1 to 21 corresponds to the age limit. Discs encoded with an age limit that is equal to or above the selected age will be blocked, and any rating below the selected age will be allowed.

**DVD Ratings** – Use the Navigation buttons to select the rating to allow for DVD. The available ratings are Kid, G, PG, PG-13, PGR, R, NC17, Adult and Off. The selected rating and below will be allowed, and any rating above will be blocked. If "Off" is selected, all discs are allowed to play.

**Area Code** – Some Blu-ray Discs may have different parental control ratings for different geographical areas. At this time the player only supports the parental control ratings used in the United Kingdom.

**Change Password** – To change the parental control password, enter a 4-digit number as the new password. Enter the new password again to confirm. If the two entries are matching, the new password replaces the old parental control password.

## Video output setup

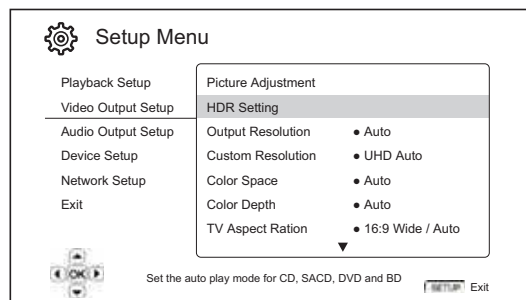

The "Video Output Setup" section of the Setup Menu system allows you to configure various video output options.

## 1. Picture adjustment

To fine tune picture control parameters in order to achieve the optimal picture quality and visual result. To use Picture adjustment, press the Setup menu button on the remote control to enter the player's Setup Menu, and then choose "Video Setup > Picture adjustment", then select the video output to be adjusted.

Since the player is equipped with only the HDMI OUT (Main) output port for video output, the Picture Adjustment menu will come up directly for HDMI output.

| Picture Adjustment |        |           |
|--------------------|--------|-----------|
| Picture Mode       | Mode 1 |           |
| Brightness         | 0      | -16   +16 |
| Contrast           | 0      | -16   +16 |
| Hue                | 0      | -16   +16 |
| Saturation         | 0      | -16   +16 |
| Sharpness          | 0      | 0   +16   |
| Noise Reduction    | 0      | 0   +3    |
| Exit               |        |           |

To change a picture adjustment parameter, use the Navigation  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$  buttons to highlight the parameter and to change its value.

To aid in the adjustment of picture control parameters, the picture adjustment menu will be reduced to only show the parameter being adjusted once you press the  $\leftarrow$   $\rightarrow$  buttons (except the Picture Mode, which you will directly see the mode name switches between Mode 1, 2 and 3, and all the other parameters are adjusted automatically). The reduced menu will be positioned near the bottom of the screen.



Adjust the parameters using the Navigation  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$  buttons. Press the Enter button to return to the large Picture Adjustment menu.

To exit the Picture Adjustment menu and return to the Setup Menu, either select "Exit" or press the Return button.

The following picture adjustment controls are available, for HDMI 1 and HDMI 2:

**Picture Mode** – The CXUHD allows you to save up to three (3) customized video modes. Press the  $\leftarrow$   $\rightarrow$  buttons to switch the mode and all parameters will be automatically adjusted to their stored values. Changes to the current parameter values will be stored automatically when you exit the Picture Adjustment screen or, switch to another Picture Mode.

**Brightness** – To adjust the brightness (black level) of the video output.

**Contrast** – To adjust the contrast (white level) of the video output.

**Note:** Proper brightness and contrast settings are necessary for a quality video output. If you do not have the correct black and white levels, your images can appear washed out or can lose detail in shadows when watching darker scenes. Televisions have brightness (black level) and contrast (white level) controls; however it may require a combination of tweaking both the player and your television to get the optimal result. First adjust the television's picture controls for the best possible picture. Once that is done, try changing the player's settings to further refine the picture to the optimal result.

**Hue** – Adjusts the hue (tint) of the video output.

**Saturation** – Adjusts the saturation (colour intensity level) of the video output.

**Sharpness** – Allows you to set the sharpness level for video output. Sharpness is a video processing function that can control the image sharpness but at the same time may cause unwanted artifacts. For HDMI 2 output, the sharpness level can be set between 0 and +16, with the default level being 0. The higher the level, the sharper the video details are. However, too high a sharpness level may cause white lines or halo-like effects to appear around objects.

**Noise Reduction** – Allows you to select whether the player will apply video noise reduction processing. The default is level 0, which turns off noise reduction. When this level is increased, the player adjusts the picture quality by applying video noise reduction. The higher the level, the more aggressively noise reduction functions are applied.

## 2. HDR setting

Allows you to choose the output mode for High-Dynamic Range content.

**Auto (default)** – Outputs HDR if supported by both the content and the display. The player automatically checks for HDR content and whether the TV or projector is HDR compatible, and if both criteria are met, the player outputs HDR video from its HDMI (Main) output terminal. Otherwise, only SDR video is output.

**Forced** – If the video content supports HDR, the player will always output video with HDR enabled regardless of whether or not the TV or projector indicates that HDR is supported. This may result in image abnormalities if the connected display does not support HDR.

**Off** – Always outputs video without HDR. HDR content will be converted to SDR.

**Strip Metadata** – HDR video will be converted to SDR but preserve the BT2020 colour gamut. The player will strip off the HDR metadata from the HDR video.

## 3. Output resolution

Allows you to choose the output resolution that best matches your television's native resolution.

**Auto (default)** – Automatically set the optimal output resolution.

**Custom** – Set the output resolution according to the desired Custom Resolution setting.

**Source Direct** – Outputs at the original resolution of the source material.

### Notes:

- DO NOT set the Output Resolution to Custom unless you know your TV's native resolution and the selected Custom Resolution is supported by your TV.
- There will be no video output or an "unsupported video signal" message may appear on screen if an unsupported output resolution is selected. To get the video back, you need to press the Resolution button on remote until "AUTO" is displayed on the front panel of the CXUHD. Then press the Enter button on the remote or wait for a few seconds to confirm the selection. The player will automatically set its output resolution to a format that is supported by the TV.

## 4. Custom resolution

Allows you to select a custom output resolution. The Output Resolution will be automatically changed to Custom if a new custom resolution is selected here. The following resolutions are available for the Custom Resolution setting:

**UHD Auto** – Ultra HD (4K) output resolution with automatic frame rate. The frame rate will be 24Hz if the source content is natively 24Hz. 50/60Hz source content will be output as 4K 50/60Hz if the display device supports it, or as 4K 25/30Hz in the user specified color space.

**UHD 24Hz** – Ultra HD (4K) output resolution with a 24Hz frame rate whenever possible. If the source content is not suitable for 4K 24Hz output, the output resolution will be 1080p 50/60Hz.

**UHD 50Hz** – Ultra HD (4K) output resolution with a 50Hz frame rate.

**UHD 60Hz** – Ultra HD (4K) output resolution with a 60Hz frame rate.

**1080p Auto** – 1080p output resolution with automatic frame rate. The frame rate will be 24Hz if the source content is natively 24Hz and the display device supports 1080p 24Hz. 50/60Hz source content will be output as 1080p 50/60Hz.

**1080p 24Hz** – 1080p output resolution with 24Hz frame rate preferred. The frame rate will be 24Hz if the source content is natively 24Hz. 50/60Hz source content will still be output as 1080p 50/60Hz.

**1080p 50Hz, 1080p 60Hz, 1080i 50Hz, 1080i 60Hz, 720p 50Hz, 720p 60Hz, 576p, 576i, 480p, 480i** – Video will be up-scaled or down-scaled to these specific output resolutions.

### Notes:

- DO NOT change the Custom Resolution unless you know your TV's native resolution.
- There will be no video output or an "unsupported video signal" message may appear on screen if an unsupported custom resolution is selected. To get the video back, you need to press the RESOLUTION button on remote until "AUTO" is displayed on the front panel of the CXUHD. Then press the Enter button on the remote or wait for a few seconds to confirm the selection. The player will automatically set its output resolution to a format that is supported by the TV.

## 5. Color space

Allows you to select the color space for the HDMI video output.

**Auto (default)** – The player checks with the display device to automatically determine what color space to use. If the display device supports YCbCr 4:4:4, then it will be used to avoid extra color space conversion.

**RGB Video Level** – The HDMI output uses RGB color space and normal signal range suitable for video displays.

**RGB PC Level** – The HDMI output uses RGB color space and expands the signal range. The expanded signal range is suitable for personal computer (PC) displays. Some TVs are designed to be used as a PC monitor, and expect signal in expanded RGB range when the DVI input is selected. For these displays if the video signal uses the normal RGB range, the black-white contrast will be reduced. You can set the player to use the RGB PC Level output and restore proper contrast.

**YCbCr 4:4:4** – The HDMI output uses YCbCr 4:4:4 color space.

**YCbCr 4:2:2** – The HDMI output uses YCbCr 4:2:2 color space. Generally this is the color space that is close to the color space encoded on the discs. (All discs are encoded in YCbCr 4:2:0 color space, and the video decoder decodes it into YCbCr 4:2:2.)

**YCbCr 4:2:0** – The HDMI output uses YCbCr 4:2:0 color space. (All Blu-ray discs are encoded in YCbCr 4:2:0 color space.)

## 6. Color depth

Allows you to select the color depth mode for the HDMI video output. For displays that support increased color depth, you should see smoother color transitions and better gradients.

**Auto (default)** – The player automatically determines the color depth mode based on the capabilities of the display device.

**12-bit** – Always uses the 12-bit color depth mode.

**10-bit** – Always uses the 10-bit color depth mode.

**8-bit** – Always uses the 8-bit color depth mode.

### Notes:

- For watching a UHD movie with HDR-10 color, you need to select Auto or 10-bit color depth to enable HDR output.
- The 12-bit and 10-bit color depth mode may not be supported by all TVs. Using the 12-bit or 10-bit color depth mode when connected to a TV that does not support it may result in no video.

## 7. TV aspect ratio

Sets the aspect ratio of the player's output image.

**16:9 Wide** – 16:9 content will be displayed in its native aspect ratio, and 4:3 contents will be stretched horizontally.

**16:9 Wide / Auto (default)** – 16:9 content will be displayed in its native aspect ratio, and 4:3 content will be displayed with black borders on both sides in order to maintain the original 4:3 aspect ratio.

## 8. 3D setting

Adjusts the playback settings for better 3D visual quality.

**3D Output** – Allows you to choose the video output mode for 3D content.

**Auto (default)** – Outputs 3D if supported both by both the disc content and the display. The player automatically checks for the existence of 3D content on the disc and the 3D compatibility of the TV or projector. If both criteria are met, the player sends 3D video from its HDMI output terminals; otherwise, only 2D video is sent out. You may need to wear 3D glasses that come with your TV in order to view 3D movies.

**Off** – Always output 2D video format, even when 3D video exists on the disc. This guarantees the video quality if your TV is not 3D compatible, or if some necessary components (such as the 3D glasses) are missing.

**Forced** – Always output 3D video format for 3D Blu-ray Discs. You may experience a black screen (no video output) if your TV is not 3D compatible.

**2D->3D Depth** – Adjusts the 3D depth perception when performing 2D-to-3D conversion (also called "simulated 3D"). The default value is 8.

**3D TV Size** – Allows you to enter the diagonal screen size of the 3D HDTV. Use the number buttons on the remote to enter the actual diagonal size of the TV screen, and then press the ENTER button to confirm. The default value is 46 inches. This value does not directly affect video quality, but some 3D movies may use this value to decide how to place certain graphics.

## 9. DVD 24p conversion

Enables 24Hz frame rate conversion for DVD. This option is only available when 1080p24 Output is enabled (set to On). Many DVDs that originate from theatrical movies are encoded with a technique called "3:2 telecine" in order to convert the 24 frames per second film to 60Hz video signal. The player can convert the 60Hz video signal back to 24 frames per second film and output as 1080p/24Hz. Smoother motion may be achieved by enabling this option, if both the TV and the DVD disc meet the conversion conditions.

**On** – Converts DVD to 24Hz frame rate when possible. Remember that motion errors may be observed if the DVD is not suitable for such conversion.

**Off (default)** – Does not convert DVD to 24Hz frame rate.

## 10. De-interlacing mode


Allows you to select the appropriate algorithm that the player should use to convert interlaced video on a DVD or Blu-ray Disc to progressive output. A proper de-interlacing mode will ensure the output video matches the original contents and is free of de-interlacing artifacts. The available options are:

**Auto (default)** – Automatically selects the de-interlacing mode depending on the video type. This is the recommended setting as it sets the player to optimally process a variety of signal types.

**Film** – De-interlacing the video originally made in film mode. The mode may improve film mode detection in some cases.

**Video** – De-interlacing the video originally shot with a video camera. Use this setting only if you are certain the disc is made from footage originally not shot with a film camera.

## Audio output setup

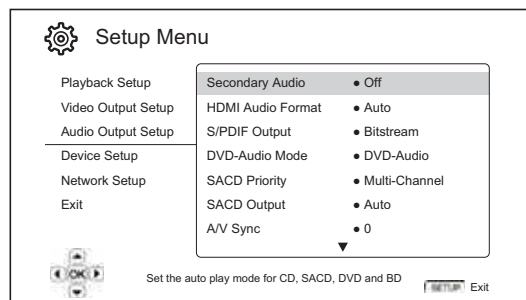

The "Audio Output Setup" section of the Setup Menu system allows you to configure preferences for audio output formats.

### 1. Secondary audio

Sets the secondary audio program mixing option. Some Blu-ray discs contain a secondary audio and video program, such as a director's commentary. Some Blu-ray Discs have a sound effect when you make menu choices. This setup menu item allows you to decide whether to mix the secondary audio program and menu sound into the primary audio.

**On** – The secondary audio program and menu sound are mixed into the primary audio. Usually this will cause the primary audio volume to be slightly reduced. High resolution primary audio will be converted to a normal resolution in order to mix with the secondary audio.

**Off (default)** – The secondary audio program and menu sound are not mixed into the primary audio and you cannot hear the secondary audio or menu clicking sound. This setting preserves the highest possible audio quality for the primary audio.

### 2. HDMI audio format

Selects the digital audio output format from the HDMI output.

**Auto (default)** – The player checks with the device connecting to HDMI output to automatically determine which audio format to use.

**LPCM** – Digital audio output via HDMI will be multi-channel Linear PCM format. When this option is selected, compressed audio bit streams will be decoded by the player and then sent as multi-channel PCM. This setting is recommended when connecting the HDMI output directly to a TV or to a receiver without advanced audio decoding capabilities.

**Bitstream** – Digital audio output via HDMI will be in bitstream format. This option is recommended when connecting the HDMI output to an A/V receiver or processor that supports advanced audio decoding of Dolby TrueHD and DTS-HD Master Audio etc.

**Off** – No digital audio output via HDMI.

**Note:** If you use HDMI to connect audio to an HDMI A/V receiver or audio processor, it is important that you choose 720p or higher HDMI output resolution when playing high resolution audio content (DVD-Audio, SACD, Dolby TrueHD and DTS-HD Master Audio). According to the HDMI specification, the bandwidth available for audio is proportional to the total bandwidth used by video. At 480p/576p resolution, the HDMI specification can only support 2 channels of audio with high sample rate (up to 192kHz), or 8 channels of audio with standard sample rate (up to 48kHz). If you play high resolution audio content at the 480p/576p resolution, you may get reduced audio resolution, incomplete audio channels, or even no audio/video output at all. Choosing a higher output resolution such as 720p or above allows enough bandwidth for all high sample rate audio channels.

### 3. Coaxial/Optical output

Sets the maximum Linear PCM output frequency for the coaxial/optical digital output. This menu item is intended to ensure that the audio output is compatible with equipment that cannot support high sample rates. It sets an upper limit to decide whether the player shall down-sample audio.

**Note:** When using the Stereo or 7.1 Analog Audio outputs the LPCM rate limit should always be set to 192kHz to allow the internal playback engine to feed the up-sampler with the maximum sample-rate the content supports.

**48k LPCM** – Supported by most equipment. Higher sample rate material will be downsampled to 48kHz.

**96k LPCM** – Allows a higher sampling rate and frequency response. If using an externally connected AV receiver or DAC via coaxial or optical, ensure that the receiver/amplifier can support it. Higher sample rate material will be downsampled to 96kHz.

**192kHz LPCM** – Allows the highest sampling rate and frequency response. If using an externally connected AV receiver or DAC via coaxial or optical, ensure that the receiver/amplifier can support it.

**Bitstream (default)** – Passes audio as compressed bitstream format to the receiver/amplifier. Choose this setting if your receiver/amplifier is capable of decoding Dolby Digital and/or DTS etc.

**Note:** Due to copyright restrictions and bandwidth limitations, SACD audio cannot be sent through the coaxial/optical audio output, and the high resolution audio on DVD-Audio and Blu-ray discs will be sent out at reduced resolution.

#### 4. DVD-Audio mode

Select which portion of a DVD-Audio disc to play.

**DVD-Audio (default)** – Play the DVD-Audio portion of the disc with high-resolution audio.

**DVD-Video** – Play the DVD-Video portion of the disc with Dolby Digital or DTS audio.

#### 5. SACD priority

Select which audio layer to play for SACD (Super Audio CD).

**Multi-Channel (default)** – Play the high resolution multi-channel surround audio layer.

**Stereo** – Play the high resolution 2-channel stereo audio layer.

**CD Mode** – Play the CD layer of a hybrid SACD disc.

#### 6. SACD output

Selects the audio output format for SACD.

**Auto** – The player checks with the device connected to the HDMI output to automatically determine which audio format (DSD or PCM) to use for SACD playback.

**PCM (default)** – SACD Direct Stream Digital (DSD) data is decoded by the player and converted into multi-channel, high resolution PCM data. The HDMI output can be sent to an external AV receiver capable of receiving multi channel PCM (HDMI 1.1 or higher inputs are required). The CXUHD's own audio outputs are also active and playback of SACD material is possible by the CXUHD itself.

**DSD** – SACD DSD data is sent out via HDMI without any conversion. For decoding by an external AV receiver capable of receiving DSD (HDMI 1.2a or higher inputs are required and the receiver must actually include support for DSD as it is not a mandatory requirement of the HDMI spec).


#### 7. A/V sync

Allows you to add a slight delay to the audio so it is synchronized to the video. You may use the LEFT/RIGHT ARROW buttons on the remote to decrease/increase the audio delay. The delay can be adjusted in 10ms steps and within the range of -100ms to +200ms. The delayed time will be applied to all output terminals including HDMI, Coaxial, Optical outputs.

##### Notes:

- The actual audio delay effect might be different for each of the output terminals due to the different audio process algorithms and signal paths used for each output. Please adjust this setting based on the actual output terminal in use.
- The negative adjustment values are for cancelling out the audio delay that the player automatically applies. Depending on the video source and the time it takes to process the video, the main decoder chip automatically applies an audio delay in order to optimize audio video synchronization. The negative manual settings reduce the automatic audio delay, while the positive manual settings apply additional delay. Any negative value setting beyond the player's automatic delay will be treated as completely cancelling the automatic delay. For example, if the A/V Sync value is manually set to -100ms and for the current video source the player applies a 70ms automatic audio delay, the final result is that the 70ms audio delay gets cancelled and the audio is not delayed at all. It is not possible to put audio ahead of video using this setting.

## Device setup

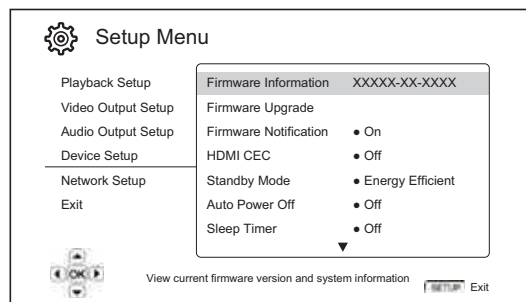

The "Device Setup" section of the Setup Menu system allows you to configure additional player options related to the hardware and control functions. The menu items in this section are:

#### 1. Firmware information

Displays the current firmware version.

#### 2. Firmware upgrade

Upgrades the player's firmware. This operation is only available when the playback is completely stopped or when there is no disc loaded.

The firmware is the system software that controls the features and functions of the player. Since the Blu-ray disc specifications are new and evolving, it is possible that a Blu-ray disc manufactured after the player was manufactured use certain new features of the Blu-ray disc specifications. We may also introduce new features from time to time. The options to upgrade the player's firmware are:

**Via USB** – You may download the firmware files from Cambridge Audio's web site to a USB drive and then use the USB drive to upgrade the player.

**Via Network** – If the player has a working Internet connection, you may upgrade the player directly over the Internet. Please follow the instructions on your TV screen.

#### 3. Firmware notification

Sets whether the player should automatically check if new firmware versions are available via the Internet server and notify the user about new firmware.

**On (default)** – Check for new firmware version automatically and notify the user about new firmware. Requires working network connection.

**Off** – Do not check for new firmware version automatically.

#### 4. HDMI CEC

CEC (Consumer Electronics Control) is an optional HDMI feature that can enable convenient remote control and automatic setup of consumer electronics over the HDMI connection. The remote control function allows you to use a single remote handset to operate multiple devices connected via HDMI. For example, you may use the TV remote to control playback of the Blu-ray disc player. The automatic setup function can automatically turn on the TV and change to the correct input when you start playing a disc in the Blu-ray Disc player. It can also turn off the player automatically when you turn off the TV. The implementation and compatibility of this feature varies by device manufacturer. Each may only implement part of the features or add their own proprietary functions. The manufacturer-specific implementation of the HDMI CEC function is often given a proprietary name of "...Link" or "...Sync". The CXUHD provides three modes for the HDMI CEC function:

**Off (default)** – HDMI CEC feature is turned off on HDMI output terminal. The player will not respond to HDMI CEC commands from other devices, nor will it setup other devices automatically.

**On** – HDMI CEC is enabled on HDMI output. Use this mode if your other devices are compatible with the player.

**Limited** – HDMI CEC is enabled on HDMI output, but the CXUHD will only respond to playback control commands. It will not respond or issue power on/off and input selection commands. Use this mode if you do not want the automatic setup function to turn on/off your devices.

#### 5. Standby mode

Allows you to choose the unit's standby mode between Energy Efficient and Quick Start Mode.

**Energy Efficient (default)** – Player starts slower, but uses only 0.5W in standby.

**Network Standby** – This mode allows to wake the player in standby mode over the network. The player takes less time to start up but consumes more power in standby mode.

## 6. Auto power off

Allows the player to auto-shutdown after 30 minutes of inactivity. This can help to reduce power consumption and increase player life.

**On** – Enable the Auto Power Off.

**Off (default)**– Disable the Auto Power Off.

## 7. Sleep timer

Allows you to specify the amount of time before the player automatically turns itself off.

**Off (default)** – The player will not turn itself off automatically.

**30/45/60/90/120 Min** – After the specified time, the player automatically shuts itself down. You can press the ▲/▼ buttons and the Enter button to select the desired time. Once selected, the remaining minutes will be displayed to the right of the "Sleep Timer" option.

## 8. Power On input

Allow you to set the initial input source after power on. It is recommended that you set this option only if you plan to use the player as a dedicated processor or per-amplifier.

**Blu-Ray (default)** – Power on with the regular Blu-ray Home Menu. This choice is recommended for regular use.

**Last Input** – Power on with the last input source. Depending on the availability of the input device, you may experience a blank screen on the display or "No signal" warning message.

## 9. Front panel brightness

To control the display intensity of the front panel Vacuum Fluorescent Display (VFD) information window. This option allows you to dim it or turn it off.

**Standard (default)** – The VFD window is at full brightness.

**Dim** – The VFD window is at reduced brightness.

**Off** – The VFD window is turned off. In this mode the display resumes momentarily when there is any user operation.

## 10. Persistent storage

Persistent storage is a data storage area that holds additional contents for BonusView and BD-Live features. The data will be kept even if you turn off the player. The following persistent storage management options are available:

**Storage Device** – To select which storage device should be used as the persistent storage. There are two USB 3.0 ports on the player that can accept a USB drive to be used as the persistent storage. The choices are:

**Internal Flash** – Use the internal flash memory for persistent storage.

**USB Drive** – Use a USB drive for persistent storage. To meet the specification for BD-Live, a USB flash drive of 1GB or larger is required. A USB hard disk is not recommended.

**Note:** The new storage device choice becomes effective only after the player is restarted. Please make sure that you turn off the player and then turn it back on after changing the "Storage Device" option.

**Space Used** – Displays the used space of the persistent storage. If too much space is used and the available space becomes too low, some Blu-ray Discs may not play properly.

**Erase Persistent Storage** – To erase the data from the persistent storage.

## 11. Text to speech

Allows you to adjust Text to Speech settings.

**Switch** – Allows you to enable and disable the player reading the text on screen when it is highlighted:

**On** – The text on screen will be read out when it is highlighted.

**Off (default)** – The text on screen will not be read out when it is highlighted.

**Language** – Allows you to choose the language for reading the text on screen when it is highlighted. Currently the player supports English and Spanish. The default language is English.

**Volume** – Allows you to set the volume of the voice for reading text on screen when it is highlighted. The default value is 100.

**Pitch** – Allows you to set the pitch of the voice for reading text on screen when it is highlighted. The default value is 100.

**Speed** – Allows you to set the speed of the voice for reading text on screen when it is highlighted:

**Very Slow / Slow / Normal / Fast / Very Fast** – These are the available speed of the voice for reading text on screen when it is highlighted. You can press the UP/DOWN ARROW buttons and the ENTER buttons to select it. The default speed is Normal.

## 12. Reset factory defaults


Resets all settings to the factory default value.

**Erase accounts and settings (default)** – Resets all settings to the factory default value and remove all application activations and account information, such as your YouTube accounts.

**Erase settings** – Resets all settings to the factory default value, but keeps the application activations and account information.

## Network setup

The "Network Setup" section of the Setup Menu system allows you to configure the parameters for the Internet connection of the player, test the connection and restrict BD-Live access. The menu items in this section are:

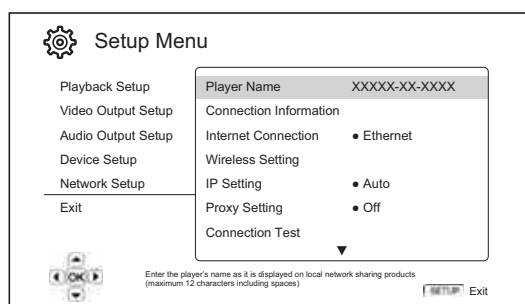

### 1. Player name

Display the player's identification name as it is displayed on local network sharing products. To change it, press the Enter button to bring the soft keyboard. The name can contain maximum 12 characters including spaces.

### 2. Connection information

Display the current internet connection information, such as connection type, IP address, Ethernet MAC, Wireless MAC, etc.

### 3. Internet connection

Selects the internet connection type.

**Ethernet (default)** – Connect to internet through the Ethernet cable, please refer to the connection instructions of the manual. Choosing this will make the "Wireless Setting" option grey and un-selectable.


**Wireless** – Connect to internet through the external wireless adaptor, please refer to the connection instructions of the manual. Choosing "Wireless" will start the wireless setting procedure, and also make the "Wireless Setting" option in the next row selectable.

**Off** – Internet access is prohibited. This will make all the remaining options in Network Setup screen grey and un-selectable.

### 4. Wireless setting

Start the Wireless Setup Assistant. You can start the Wireless Setup Assistant by selecting the Wireless Setting option, or by selecting Wireless in Internet Connection menu. The procedure is described as follows:

The player first searches for the previous wireless settings. If they exist, a message will pop up to remind you.

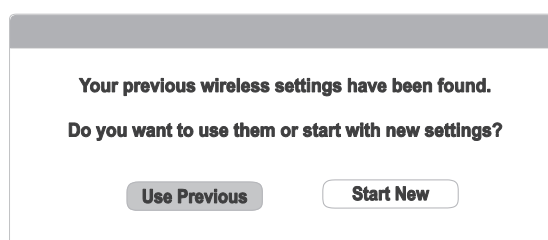

**Use Previous** – Uses the previous wireless settings. A summary of the previous wireless settings will display, showing information such as the SSID (network name), Security Mode and Password.

After verifying the previous settings, the player will test the connection and display the results.

**Start New** – Creates a new wireless configuration. The CXUHD supports three wireless configuration methods:

**Scan** – Scans for an available wireless network. The player automatically scans for any available wireless networks and displays the search results in a window. You can press the ▲/▼ buttons to highlight a network and then press the Enter button to select it. If this network is secured, you will need to input the password using the remote control. The player will then test the connection and display the results.

**Manual** – Allows you to manually enter the information for a wireless network. You need to use the remote control to input the SSID, select the Security Mode and input the Password. The player will then test the connection and display the results.

**WPS** – Starts the Wi-Fi Protected Setup. The CXUHD supports the WPS standard to provide an easy and secure establishment of a wireless home network. Configures the WPS using a PIN (Personal Identification Number). The CXUHD will generate a PIN code and you will need to input it into the software control panel of your wireless router or access point. Please follow the on-screen instructions.

**Note:**

- SSID is short for Service Set Identifier. It is an identifier for each wireless router or access point, and is also referred as a network name.
- WPS is short for Wi-Fi Protected Setup (WPS). It is the latest standard for easy and secure wireless home network configuration. It is also named Wi-Fi Simple Config. To use WPS, a WPS compatible router or access point is required.

## 5. IP setting

To determine how the player obtains its IP address.

**Auto (DHCP)** – The player automatically obtains its IP address information using DHCP (Dynamic Host Configuration Protocol). This is the default setting. In most cases, automatic IP configuration is best and requires no user intervention.

**Manual** – Manually enter the numeric IP address information. For more information on how to manually configure the Internet connection and what values to use, please consult your broadband router/modem instruction manuals or call your Internet service provider.

**IP Address** – The Internet Protocol address of the player. When "IP Configuration" is set to "Auto (DHCP)", the value displayed here is obtained using DHCP and cannot be changed.

**Subnet Mask** – Each IP address has an associated subnet mask. It is used by the player to decide whether to route network traffic through the router or directly to another device on the same network. When "IP Setting" is set to "Auto (DHCP)", the value displayed here is obtained using DHCP and cannot be changed.

**Gateway** – The IP address of the router. It is also called "default gateway" or "default router". When "IP Setting" is set to "Auto (DHCP)", the value displayed here is obtained using DHCP and cannot be changed.

**DNS 1** – The IP address of the first (primary) DNS (Domain Name System) server. DNS is the mechanism to translate human-readable addresses to numeric IP addresses. When "IP Setting" is set to "Auto (DHCP)", the value displayed here is obtained using DHCP and cannot be changed.

**DNS 2** – The IP address of the second (secondary) DNS server. When "IP Setting" is set to "Auto (DHCP)", the value displayed here is obtained using DHCP and cannot be changed.

## 6. Proxy setting

Configures the proxy server settings. A proxy server works as an intermediary for network communication between clients and other servers, which can provide benefits like security, anonymity, speedup or circumventing regional restrictions.

**On** – To access the Internet via a proxy server.

**Proxy Host:** To enter the proxy host name using the remote control.

**Proxy Port:** To enter the proxy host port number using the remote control.

**Off (default)** – Do not use a proxy server.

## 7. Connection test

Tests the Internet connection. It is recommended that you test the connection when you initially connect the player to the Internet, or whenever changes to "IP Setting" and other network parameters are made.

## 8. BD-Live network access

To restrict BD-Live content access.

**On** – BD-Live access is permitted.

**Limited** – BD-Live access is permitted only for contents that have a valid content owner certificate. Internet access is prohibited if the BD-Live contents do not have a certificate. This option ensures that you are accessing only authentic content, although it may block your access to smaller independent content providers.

**Off (default)** – BD-Live access is prohibited.

## 9. My network

Sets the My Network (in-home media sharing) client option. My Network option enables the player to receives streaming audio, video and photo from UPnP media servers on the home network.

**On (default)** – Enable the My Network client. The available media servers are listed in the "My Network" option of Home menu.

**Off** – Disable the My Network client. No media servers will be shown in "My Network" option, and a warning message will show after you enter "My Network" option.

## Appendix - language code list

: These affect the Audio/Subtitle/Disc menu defaults only and not the On Screen menu language.

| Code | Language name   | Code | Language name    | Code | Language name  |
|------|-----------------|------|------------------|------|----------------|
| 6565 | Afar            | 7285 | Hungarian        | 8084 | Portuguese     |
| 6566 | Abkhazian       | 7289 | Armenian         | 8185 | Quechua        |
| 6570 | Afrikaans       | 7365 | Interlingua      | 8277 | Rhaeto-Romance |
| 6577 | Amharic         | 7378 | Indonesian       | 8279 | Romanian       |
| 6582 | Arabic          | 7383 | Icelandic        | 8285 | Russian        |
| 6583 | Assamese        | 7384 | Italian          | 8365 | Sanskrit       |
| 6588 | Aymara          | 7387 | Hebrew           | 8368 | Sindhi         |
| 6590 | Azerbaijani     | 7465 | Japanese         | 8372 | Serbo-Croatian |
| 6665 | Bashkir         | 7473 | Yiddish          | 8373 | Singhalese     |
| 6669 | Byelorussian    | 7487 | Javanese         | 8375 | Slovak         |
| 6671 | Bulgarian       | 7565 | Georgian         | 8376 | Slovenian      |
| 6672 | Bihari          | 7575 | Kazakh           | 8377 | Samoa          |
| 6678 | Bengali, Bangla | 7576 | Greenlandic      | 8378 | Shona          |
| 6679 | Tibetan         | 7577 | Cambodian        | 8379 | Somali         |
| 6682 | Breton          | 7578 | Kannada          | 8381 | Albanian       |
| 6765 | Catalan         | 7579 | Korean           | 8382 | Serbian        |
| 6779 | Corsican        | 7583 | Kashmiri         | 8385 | Sundanese      |
| 6783 | Czech           | 7585 | Kurdish          | 8386 | Swedish        |
| 6789 | Welsh           | 7589 | Kirghiz          | 8387 | Swahili        |
| 6865 | Danish          | 7665 | Latin            | 8465 | Tamil          |
| 6869 | German          | 7678 | Lingala          | 8469 | Telugu         |
| 6890 | Bhutani         | 7679 | Laothian         | 8471 | Tajik          |
| 6976 | Greek           | 7684 | Lithuanian       | 8472 | Thai           |
| 6978 | English         | 7686 | Latvian, Lettish | 8473 | Tigrinya       |
| 6979 | Esperanto       | 7771 | Malagasy         | 8475 | Turkmen        |
| 6983 | Spanish         | 7773 | Maori            | 8476 | Tagalog        |
| 6984 | Estonian        | 7775 | Macedonian       | 8479 | Tonga          |
| 6985 | Basque          | 7776 | Malayalam        | 8482 | Turkish        |
| 7065 | Persian         | 7778 | Mongolian        | 8484 | Tatar          |
| 7073 | Finnish         | 7779 | Moldavian        | 8487 | Twi            |
| 7074 | Fijian          | 7782 | Marathi          | 8575 | Ukrainian      |
| 7079 | Faroese         | 7783 | Malay            | 8582 | Urdu           |
| 7082 | French          | 7784 | Maltese          | 8590 | Uzbek          |
| 7089 | Frisian         | 7789 | Burmese          | 8673 | Vietnamese     |
| 7165 | Irish           | 7865 | Nauru            | 8679 | Volapuk        |
| 7168 | Scots Gaelic    | 7869 | Nepali           | 8779 | Wolof          |
| 7176 | Galician        | 7876 | Dutch            | 8872 | Xhosa          |
| 7178 | Guarani         | 7879 | Norwegian        | 8979 | Yoruba         |
| 7185 | Gujarati        | 7982 | Oriya            | 9072 | Chinese        |
| 7265 | Hausa           | 8065 | Punjabi          | 9085 | Zulu           |
| 7273 | Hindi           | 8076 | Polish           |      |                |
| 7282 | Croatian        | 8083 | Pashto, Pushto   |      |                |

## Technical specifications

|                             |                                                                                                                                                 |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Disc types                  | UHD Blu-ray, Blu-ray, Blu-ray 3D, DVD-Video, DVD-Audio, AVCHD, SACD, CD, Kodak Picture CD, CD-R/RW, DVD±R/RW, DVD±R DL, BD-R/RE                 |
| BD Profile                  | BD-ROM Version 3.1 Profile 6 (also compatible with BD-ROM Version 2.5 Profile 5)                                                                |
| Architecture Decoder        | Mediatek MTK8591                                                                                                                                |
| External Storage            | 2 x USB 3.0                                                                                                                                     |
| Video Frame Rates           | 24Hz/50Hz/60Hz                                                                                                                                  |
| Video format/file format    | MPEG2, MPEG 2 HD, MPEG4, MPEG4 support HD, AVC, VC-1, XVID, AVI, AVC, MKV (4.1), DAT, VOB, WMV, MOV, MP4, MPEG-PS, FLV, MTS, M2TS, M2T, M4V, QT |
| Audio file format support   | AAC, WMA, MP3, APE, Ogg Vorbis, FLAC, WAV                                                                                                       |
| Picture file format support | JPG, BMP, GIF, PNG                                                                                                                              |

### Notes:

- Whilst we strive to maintain maximum file compatibility, because of inconsistencies in how some file formats are generated and a constantly changing industry we cannot guarantee the playability of all file formats above.
- BD ISO files are not supported for copyright reasons.
- Some forms of M4A, WMA or APE with embedded covers are not supported.

|                                            |                                                                                                                                                                             |
|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HDMI input and output 1                    | <b>Video</b><br>UHD/1080p24/1080p/1080i/720p/576p/576i/480p/480i, 3D frame-packing 720p/1080p24.<br><br><b>Audio</b><br>up to 7.1ch/192kHz PCM, up to 5.1ch DSD, Bitstream. |
| HDMI output 2 (audio only)                 | <b>Audio</b><br>up to 7.1ch/192kHz PCM, up to 5.1ch DSD, Bitstream.                                                                                                         |
| Ethernet                                   | 1000 BASE-T                                                                                                                                                                 |
| PSU                                        | Universal switch-mode 100 – 240V AC, IEC inlet                                                                                                                              |
| Max power consumption                      | 35W                                                                                                                                                                         |
| Standby consumption (Quick Start mode off) | <0.5W                                                                                                                                                                       |
| Dimensions (H x W x D)                     | 82 x 430 x 312mm (3.2 x 16.9 x 12.3") with feet                                                                                                                             |
| Weight (unboxed)                           | 5.0kg (11.0lbs)                                                                                                                                                             |
| Wi-Fi                                      | 802.11B, G, N (2.4GHz), 802.11A, N, AC (5GHz).                                                                                                                              |

Cambridge Audio's policy is one of continuous improvement. Design and specifications are therefore subject to change without prior notice.

## Troubleshooting

### There is no power

Ensure the AC power cord is connected securely.

Ensure the plug is fully inserted into the wall socket and is switched on.

Check fuse in the mains plug or adaptor.

### The player will not read the disc

Check the disc is not loaded upside down.

Check that the disc is not too scratched or dirty.

The disc type is not supported by this unit.

Check its region and type.

Functions on some discs may not work on this unit. This is not a malfunction of the player.

### There is no picture

Check that the video cable is connected properly.

Check that the TV input is selected correctly.

Check that the video format is supported.

Check that the 'Pure Audio' mode is not enabled.

### The disc is skipping

Check that the disc is not too scratched or dirty.

Ensure that the CXUHD is on a firm surface and not subject to vibrations.

### Remote control is not working

The batteries are flat.

The remote is too far from the unit or out of the effective range.

### Files on a connected USB device do not play

If the USB drive is incompatible, or the player encounters errors while reading the USB drive or flash memory card, the screen displays "Device Error". In this case please verify that the USB drive is compatible, and try to unplug the device and re-insert again.

In some cases, an incompatible USB device may cause the CXUHD to stop responding. If this occurs simply turn off the power, remove the USB device, and turn the player back on.

The file type is incompatible. Check the supported file types.

The drive requires too much power from the USB socket.

### Problems using HDMI

Ensure that your screen supports HDCP (High-Definition Copy Protection).

Ensure your screen is capable of displaying the resolution being output by the Blu-ray player.

**Note:** Cables which run over 5m may cause sync or grounding issues.

For more frequently asked questions (FAQs), technical advice and information on getting the most out of your CXUHD, please visit the Support section on Cambridge Audio's website:

[www.cambridgeaudio.com/support.php](http://www.cambridgeaudio.com/support.php)

Cambridge Audio is a brand of Audio Partnership Plc  
Registered Office: Gallery Court, Hankey Place  
London SE1 4BB, United Kingdom  
Registered in England No. 2953313

[www.cambridgeaudio.com](http://www.cambridgeaudio.com)

