



## **AMICO COLOR**

Instruction manual- English

## **1. INTRODUCTIONS**

### **1.1 INFORMATIONS :**

Thanks for choosing AMICO COLOR digital mobile phone. With this user manual, you can understand the operation of the mobile phone and enjoy its perfect function and simple operation.

AMICO COLOR mobile phone is designed for GSM/GPRS network. This AMICO COLOR mobile phone accords with GSM/GPRS technical specification and is approved by domestic and international authoritative organizations.

## 2. BEFORE USING

### 2.1 Keys description:



### Keys Location:

1	Charging Interface	7	Left key	13	Up key
2	Earpiece	8	Down key	14	End/Power key
3	USB	9	Keypad	15	Right key
4	Side UP button	10	MIC	16	SOS key

5	Side DW button	11	Flashlight	17	Flashlight button
6	Send key	12	LCD screen	18	Battery cover

**Numeric keys**

<b>Keys</b>	<b>Description</b>
<b>Navigation keys</b>	UP navigation: press the Up navigation key to move up. DOWN navigation: press the Down navigation key to move down
<b>Right key</b>	Carry out the function indicated by the directing symbol at the bottom right corner of the screen.
<b>Left key</b>	Carry out the function indicated by the directing symbol at the bottom left corner of the screen.
<b>Dial key</b>	Make and answer calls; order out call log in idle screen.
<b>END/Power key</b>	End or refuse a call. Power on/off. Return to standby mode from other modes.

<b>Number key</b>	Enter numbers and characters. 1-9 number keys can be set as one-touch dial keys.
<b>* key</b>	Enter specific symbols, Chinese punctuation, symbol *, P and W. It usual as volume key.
<b># key</b>	Press <b>#</b> key to switch input methods. Hold this key long time to switch between mute mode and normal mode. It usual as volume key to match with star key.
<b>Side key</b>	Press side key to move up/down, some special screen use them to move left/right. For example in phone setting date and time screen.
<b>SOS key</b>	Long press the SOS key to use emergency function.(some phones have this function).

## 2.2 Battery

The battery in original state has about 50% electricity quantity and you can use it after unpacking. It performs best after full charge/discharge for the first three times.

## 2.3 Removing & Installing the Battery

- **Remove:** Press and push at the head side of the

handset to open the battery cover, then lift up the battery to remove.

- **Install:** Insert the battery, push the battery cover until you hear “click”

#### **2.4 Charging the battery**

- Connect the power supply of charger.
- Plug the charger connector into the charge port at the top side of the phone.
- Charge indicator displays on the screen and flickers during the charging process. If the battery is charged in power-off condition, the screen will display charging indicator to tell the phone is charging. If the phone is over-used in shortage of battery, the screen may not display the charge indicator immediately but after a while.
- When the battery level indicator changes from charging symbol to full level indicator and stops flickering, it means charge has been finished. If the battery is charged in power off condition, a charging-stop animation indicates the charge has been finished. Generally the whole charge process needs 3~4 hours. During the charge process, your phone and charger may become hot, and this is a normal phenomenon.

#### **2.5 Usage of USB**

- **Insert the USB cable in power on mode:**

Plug in the USB cable in power on mode and the menu will be popped out.

- **Mass Storage:** it can still be in power on status and be used as a U-disk, while it has the function of USB charging.

■ **Insert the USB cable in power off mode:**

To use it as a U-disk, while it has the function of USB charging.

- **COM Port:** it can be used as a modem or USB charging function.

## **2.6 Connecting to the network**

### **2.6.1 SIM card**

Please insert a valid SIM card (user Identification card) into the phone before using it. SIM card is the key for you to enter digital GSM network. Inside the battery compartment you can see SIM card slot then insert your SIM card.

### **2.6.2 Inserting/removing SIM card**

- The SIM card is usually stored in a card and you need to take it out carefully before installing.
- Turn off the mobile phone, remove battery and external power supply. Insert the SIM card into the slot or pull out the SIM card from the slot.

### **2.6.3 Switching on/off your phone**

Press and hold the END/Power key to switch on/off the mobile phone.

### **2.6.4 Unlocking the SIM card**

By setting PIN 1 (personal Identification number) code of SIM card and handset lock code, you can protect your SIM card and phone from illegal use. When this function is put in use, you have to enter PIN1 code each time you power on your phone. To unlock the SIM card before you dial or receive calls. You may cancel the SIM card protection, in this case the SIM card will be unable to prevent illegal use.

- Press the END/Power key to power on the phone.
- Enter PIN1code use Right key to clear the incorrect input.  
If you enter a wrong PIN1 code for three times in a row, your SIM card will be locked by the network and the phone will ask for PUK 1 code. If you don't know the PUK1 code, do not enter any code and send your SIM card to the operator.

### **2.6.5 Connecting to network**

The mobile phone will search for network automatically after the SIM card is decrypted successfully (display "Searching for network" on the screen). The name of network operator will appear in the standby state of the phone once get



connected.

#### **2.6.6 Making calls**

When the operator symbol of the network appears in the screen, you can make or answer calls. The manifestation in the top left hand corner of the screen shows the signal strength of the network.

#### **2.6.7 Making DDD (Direct Distance Dialing)**

**To dial: Area Code + Phone number + Send key**

#### **2.6.8 Making IDD**

**To dial: (+)Country Code + Complete phone number + Send key**

#### **2.6.9 Dial the number in the Phonebook list**

Your mobile phone listed all the numbers so that you can view all the call logs. When the list is full, old numbers will be deleted automatically. You can check the list by the following operations:

- Press Dial key to view the "Call history", and then you can press the Send key to view "options".
- All the numbers in the history list can be dialed directly by pressing the Dial key.

#### **2.6.10 Emergency call**

If you are within the network coverage area (It can be checked by the network signal strength displayed in the upper left corner of the screen), you are entitled to make emergency calls. If your network provider doesn't supply roaming service in the area, the screen will display "EMERGENCY", which means only emergency calls are available. If you are within the network covering area, emergency calls can be made even without SIM card.

#### **2.6.11 Answering calls**

if any key answer is set On, you can press any key to answer a call in call-in mode, otherwise you need to press Send key to select "Answer" to answer a call.

#### **2.6.12 Call history**

Your mobile phone can store the latest call record and the total talk time since the phone is used (see Chapter "Call history").

### **3. MENU INSTRUCTION**

#### **3.1 Using Menu instruction**

The following context lists out the brief explanations to each function that this phone offers.

#### **3.2 Phonebook**

This function allows you to browse the telephone records in

Phonebook in alphabetic order of the initial letters of the names. By use of this function, you can search for your desired number in Phonebook.

### **3.3 Messages**

If network supports and you have subscribed this service, you can freely send and receive short messages.

#### **3.3.1 Write message**

- The network serve of text message allows you to send out the text messages to the other phone which can receive the text message. Be sure you have established the center number of service before writing new messages

#### **3.3.2 Write multimedia message**

Firstly, input the message content you press the key "\*" to insert symbols, after input you can do as follows:

- **Send to:** Allowing you to send the multimedia message.
- **Input method:** Allowing you to select input methods.
- **Add picture:** Allowing you to insert a picture.
- **Add sound:** Allowing you to insert a sound file.
- **Add video:** Allowing you to insert a video file.
- **Add subject:** Allowing you to enter or edit a theme.
- **Preview MMS:** Allowing you to view the MMS.
- **Slide options:** You can select Add slide behind. Add

slide before or set the slide timing.

- **Advanced:** Allowing you to insert attachment or insert bookmark.
- **Save to Drafts:** Only allowing you to save the message in Drafts.

### **3.3.3 Inbox**

- Press Select to read the content of the message after the message list.

### **3.3.4 Drafts**

After entering Drafts, it displays those messages only saved in Drafts, press the Send key in the index, you can select "View, Edit, Delete, Delete all

### **3.3.5 Outbox**

After entering Outbox, it displays those messages only unsent in Outbox, press the Send key in the index, you can select "View, Resend, Edit, Delete, Delete all" to do the correlative operation.

### **3.3.6 Sent message**

After entering the "Sent messages", it displays those messages already sent out.

### **3.3.7 Delete message**

When you select "Delete messages" to enter, you can select

Delete Inbox, Outbox, Drafts, Sent messages or All messages to do the correlative operation.

### **3.4 Call center**

In Idle mode, press the Up key to enter the Main Menu, press Up/Down key to select "Call center" to enter.

#### **3.4.1 Call history**

#### **3.4.2 Dialed calls**

Enter the tag Dialed Calls to view the dialed call list.

#### **3.4.3 Received calls**

Enter the tag Received Calls to view the received call list.

#### **3.4.4 Delete call logs**

There are four menus in deleting the call history: Missed calls, Dialed calls, Received calls and Delete all. The customer can choose clearing and vacating certain list of call history.

### **3.5 Extra**

#### **3.5.1 Calculator**

This phone provides you with a calculator possessing four basic functions to facilitate your simple calculations.

### 3.5.2 SOS

You can select On or Off to start or stop SOS function.

#### ■ Emergency number set

In the number list screen, you can press the Send key to select Edit or Remove. Additionally you can set the emergency number by sending a message to the phone. You can write a message command:

**"setnumber:name:number:code"**, e.g. "setnumber:Jack:13715266888: 0000" and send the message to the phone.

**Note:** The verified code can be set in "Code Set". The default code is 0000.

#### ■ Emergency SMS editor

You can edit the message content. The default message is "Help". Additionally you can set the emergency message by sending a message to the phone. You can write a message command: **"setsms:message:code"**, e.g. "setsms:Come:0000" and send the message to the phone.

### 3.5.3 SMS reminder switch

Press Up/Down key to select On or Off, press the Send key to confirm.

### 3.5.4 Code set

The default code is 0000, you can change it.

Additionally you can set the code by sending a message to

the phone. You can write a message command: "**pwd:new code:old code**", e.g. "pwd:1234:0000" and send the message to the phone.

### 3.5.5 Calendar

This function can view calendar at any time.

### 3.5.6 Alarm

Display the schedules of today and future. In Options, you can View, Add, Edit, Delete, Delete all or Send.

## 3.6 Settings

### 3.6.1 Phone settings

- **Time and Date:** Set Time and Date.
- **Schedule power on/off:** set a auto power ON/OFF time of the handset.
- **Language:** select a display language of handset menu.
- **Flight mode:** Flight mode not only saves power, but also allows you to use the phone without inserting the SIM card.
- **Pref. input methods:** select a preferred input method for all the input screen.
- **Display**

### 3.6.2 Network settings

### ■ SIM card Network setup

**Network selection:** set the method of selecting networks.

- **Automatic:** Auto search the network to which the SIM card is subject.
- **Manual:** Search all available networks, and register manually.
- **Preferences:** Pre-save some favorite networks.
- **Band Selection:** Select a proper band.
- **GPRS connection:** select GPRS connecting mode, constant or temporary.

### 3.6.3 Security settings

#### 3.6.3.1 SIM security

##### ■ PIN lock

You can set security settings in this menu to prevent your mobile phone from being used illegally.

##### ■ PIN code

PIN Code can prevent your mobile phone from being used illegally. If the current PIN Code is closed, please select Open to activate this protection function. Next time when you power on your mobile phone, PIN Code will be requested. If the current PIN code is activated, select Close to cancel PIN code protection function. Select Change PIN Code to set a new PIN Code. Please follow the procedure to input old PIN Code, new PIN Code and again new PIN code.

**Note:** If you input wrong PIN Code in three consecutive times, SIM card will be locked. In this case, you need PUK



Code to unlock SIM card. PIN code and PUK code may be given you along with SIM card. If you don't have it, please contact your network service provider. In general, default PIN code is 1234, please change to your own code.

#### **3.6.3.2 Change password**

Change the Password of the phone. The default password of phone is **1122**

#### **3.6.3.3 Auto keypad lock**

Set the waiting time for locking the key pad. After setting, key pad will be locked automatically.

#### **3.6.4 Restore factory setting**

The default password of restoring factory security is 1122. If you confirm to restore, the phone will restore and reboot.

### **3.7 User Profile**

#### **3.7.1 General**

- **Activate:** Select the "Activate", and then press the Send key to activate the setting.
- **Customize**
  - **Alert type:** Press the left or right key to select.
  - **Ring only:** rings only, without vibration.
  - **Vibrate only:** vibrates only, without ringing.
  - **Vibrate and ring:** both vibrates and rings.
  - **Vibrate then ring:** vibrates first, then rings.

- **Ring type**
  - **Repeat:** the ring tone repeats uninterruptedly.
  - **Ascending:** the ring tone repeats uninterruptedly, and gets increasingly loud.
  - **Beep once:** the ring tone is heard once only.
- **Incoming call:** You can press the Send key to enter the option list to select "Change" to choose the ring tone and save it.
- **Ringtone volume:** Press the Left or Right key to adjust the volume.
- **Message:** You can press the Send key to enter the option list to select "Change" to choose the ring tone and save it.
- **Message volume:** Press the Left or Right key to adjust the volume.
- **Keypad:** Press the Left or Right key to select the tone.
- **Key tone volume:** Press the Left or Right key to adjust the volume.
- **Power on:** You can press the Send key to enter the option list to select "Change" to choose the ring tone and save it.
- **Power off:** You can press the Send key to enter the option list to select "Change" to choose the ring tone and save it.
- **System alert:** Press the Left or Right key to select on or off.

### 3.7.2 Reset

Recover the default value.

#### **4. EC COMPLIANCY DECLARATION**

The company Brondi S.p.A., with legal headquarters in Via B. Gozzoli n. 60-00142 Roma and operative base in Via Guido Rossa 3-10024 Moncalieri (TO), declaration that the device **AMICO COLOR** complies with all the requirements specified in the 95/5/CE European Directive Concerning radio and equipment and that it complies with the following telecommunication regulations

**EN301511 V9.0.2, EN301489-7 V1.3.1, EN301489-1 V1.8.1 , EN60950, EN50360**

The compliance with the above mentioned requirements is shown by the label



The product complies with the 89/336/CEE Directive relating to the electromagnetic compliancy and with the 73/23/CEE(low voltage) concerning safety regulations.



**BRONDI S.p.A.**

**[www.brondi.it](http://www.brondi.it)**

**[info@brondi.it](mailto:info@brondi.it)**



Waste electrical products must not be disposed of with household waste. This equipment should be taken to your local recycling center for safe treatment

**Version 1 : June 20, 2012**